Panasonic



Operating Instructions

IP Conferencing Phone

Model No. KX-NT700



Thank you for purchasing this Panasonic product. Please read this document carefully before using this product and save for future use.



KX-NT700: Version 1.1 or later

Introduction

Connection to a Panasonic Pure IP-PBX (IP-PBX Mode)

The unit can be connected to a Panasonic KX-TDE or KX-NCP series PBX and used as a SIP extension. This allows you to make and receive calls using the outside lines and IP network connected to the PBX, call other extensions of the PBX by dialling their extension numbers, participate in conference calls with 4 or more other participants, etc.



The following features are available when the unit is used as a SIP extension. Refer to the PBX documentation for details.

- Account Code Entry
- Automatic Route Selection (ARS)
- Conference (as a member only)
- DND Override
- Doorphone Call
- Extension Block
- Operator Call

- Personal Speed Dialling
- Redial
- S-CO Line Access
- System Speed Dialling
- TIE Line Call
- Trunk Group Access

Standard Connection Methods

Allow you to make and receive peer to peer IP calls, TEL calls, and PS or PC calls.



Connection to an IP Network (Intranet) and/or Panasonic Pure IP-PBX

Allows you to make and receive calls over an IP network.

In this document, this connection method is referred to as the "IP line", and calls made using the IP line are referred to as "IP calls". There are 2 modes for making and receiving IP calls. When using IP-PBX mode (see page 2), the unit can make and receive IP calls as a SIP extension of a Panasonic KX-TDE or KX-NCP series PBX. When using peer to peer mode, the unit communicates directly with the other party's device.

Connection to an Analogue Telephone Network or PBX

Allows you to make and receive traditional phone calls.

In this document, this connection method is referred to as the "TEL line", and calls made using the TEL line are referred to as "TEL calls".

Connection to a Compatible Panasonic Portable Station

By connecting the unit to a compatible Panasonic Portable Station (PS) using the included PS Cable, you can use the microphones and speaker of the unit for calls made or received with the PS. In this document, this connection method is referred to as the "PS line", and calls made using the PS line are referred to as "PS calls".

Connection to a Computer

By connecting the unit to a computer using the included PC Cable, you can use the microphones and speaker of the unit for calls made or received with the computer using your preferred IP phone software. In this document, this connection method is referred to as the "PC line", and calls made using the PC line are referred to as "PC calls".

Introduction

Other Features

Conference Calls

While on a call, you can make or receive an additional call, creating a 3-party conference call (see page 34 or page 36). Conference calls can be made using the following connection methods.

2 IP calls (Peer to peer mode only)

While **1** and **2** are talking, **1** calls or is called by **3**.



1 IP call and 1 TEL call

While () and (2) are talking, () calls or is called by (3).



1 IP call and 1 PS call or 1 PC call

While **1** and **2** are talking, **1** uses a PS or computer to call **3**.



High-quality Audio

The unit provides unparalleled audio quality and features, including:

- G.722 speech codec support (Peer to peer mode only)
- full-duplex communication
- speech speed conversion (see page 37)
- mic noise reduction (see page 37)
- External Wired MIC connection (see page 30)

SD Memory Card Recording

Phone calls and voice memos can be recorded to, and played back from, a compatible SD memory card (see page 41).

PoE (Power over Ethernet) Ready

The unit is compliant with PoE (IEEE 802.3af) standards, and contains a power receiving device that enables it to receive power from the same Ethernet cable used for IP network connection. This allows you to use the unit in locations where there is no AC outlet nearby, saving you the cost of installing a new AC outlet. PoE connection requires a PoE-compliant hub or similar device. The included AC adaptor can be used instead of a PoE connection if you want to connect the unit to a standard AC outlet.

Conferencing Phone Manager Software Features

The unit can be used in conjunction with Conferencing Phone Manager. This software can be found on the included CD-ROM, and allows you to operate and program the unit using a computer (see page 60).

Introduction

Other Information

Included Documentation

Quick Reference Guide

Briefly describes how to connect the unit and introduces commonly used features.

Operating Instructions (this document)

Describes how to connect, use, program, and maintain the unit.

<u>Note</u>

- Certain products and features described in this document may not be available in your country or area. Consult a certified Panasonic dealer for more information.
- In this manual, the suffix of each model number is omitted unless necessary.

PBX Connection

- If the unit is connected to a PBX, refer to the PBX documentation for information about making calls, receiving calls, and other features.
- Do not connect the unit to an analogue telephone line to which other telephones are connected.

Computer Screen Shots

- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- Screen shots in this document were captured using Microsoft Windows XP, and are provided for reference only.

Trademarks

- SD logo is a trademark.
- Microsoft®, Windows®, Windows Vista®, and Windows Media® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Windows XP refers to the Microsoft Windows XP operating system.
- QuickTime® is a trademark of Apple Inc., registered in the U.S. and other countries.
- Intel®, Pentium®, and Celeron® are trademarks or registered trademarks of Intel Corporation in the United States and other countries.
- All other trademarks identified herein are the property of their respective owners.

MD5 Copyright Notice

This software uses the Source Code of RSA Data Security, Inc. described in the RFC1321 (MD5 Message-Digest Algorithm).

Copyright (C) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

Firmware Notice

• The unit's firmware is protected by copyright laws and international treaty provisions, and all other applicable laws. It cannot be reverse engineered, decompiled or disassembled.

For Future Reference

Record the information in the space below for future reference.

Note

• The serial number of this product may be found on the label affixed to the bottom of the unit. You should note the serial number of this unit in the space provided and retain this manual as a permanent record of your purchase to aid in identification in the event of theft.

MODEL NO.	
SERIAL NO.	
DATE OF PURCHASE	
NAME OF DEALER	
DEALER'S ADDRESS	
DEALER'S TEL. NO.	

For Your Safety

To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard and injury caused when the denotation is disregarded and improper use is performed.



Denotes a potential hazard that could result in serious injury or death.



Denotes a hazard that could result in minor injury or damage to the unit or other equipment.

The following symbols are used to classify and describe the type of instructions to be observed.

This symbol is used to alert users to a specific operating procedure that must not be performed.

This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.

0



WARNING

General Safety



Do not disassemble this unit. Only qualified personnel should service this unit. Disassembling the unit may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock.



Do not insert foreign objects into the unit.

Do not connect or disconnect the AC plug with wet hands.

Disconnect the unit from the AC outlet, disconnect the LAN cable, and contact the dealer if:

- The AC adaptor cord, AC cord, or AC plug becomes damaged or frayed.
- The unit is exposed to rain, water, or any other liquid.
- The unit is dropped or damaged.
- Internal components are exposed due to damage.
- The unit does not operate properly.
- Performance deteriorates.



Disconnect the unit from the AC outlet and disconnect the LAN cable if the unit emits smoke, an abnormal smell, or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorised service centre.



Clean the AC plug periodically with a soft, dry cloth to remove dust and other debris.

Installation



Do not connect the unit to the AC outlet, AC extension cords, etc., in a way that exceeds the power rating of, or does not comply with the instructions provided with, the AC outlet, AC extension cords, etc.



Do not touch the unit, AC adaptor, AC adaptor cord, AC cord, or telephone cord during a lightning storm.



Do not install telephone jacks in wet locations unless the jack is specifically designed for wet locations.



Do not touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.



If using an AC adaptor, use only the included AC adaptor.

The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.



Only connect the unit to the type of electric power specified on the label affixed to the unit. Confirm the type of electric power supplied to the installation site if necessary.



Use caution when installing or modifying telephone lines.

Placement



Do not expose the unit to contact with liquids (rain, water, moisture, oil, etc.) or excessive smoke or dust. Do not subject the unit to excessive shock.



Do not allow anything to rest on the AC adaptor cord, AC cord, or LAN cable. Do not locate this unit where the AC adaptor cord, AC cord, or LAN cable may be stepped on or tripped on.



Place this unit on a flat surface. Serious damage and/or injury may result if the unit falls.



Allow 10 cm clearance around the unit for proper ventilation.

CAUTION



Do not place heavy objects on top of this unit.

When the unit receives power from the AC adaptor, the AC adaptor is the main disconnect device. Ensure that the AC outlet is installed near the unit and is easily accessible, so that the unit can be disconnected from the AC outlet if necessary.



Disconnect the AC adaptor cord and all cables from the unit before cleaning. Clean the unit with a soft, dry cloth. Do not use liquid, aerosol cleaners, abrasive powders, or chemical agents to clean the unit.



The SD memory card poses a choking hazard. Keep the SD memory card out of reach of children.

When left unused for a long period of time, disconnect the unit from the AC outlet. When the unit receives power from a PoE power supply, disconnect the LAN cable.

Notice

- Read and follow all instructions, warnings, cautions, etc. including those marked on the unit.
- Before connecting the unit, confirm that the unit supports the intended operating environment.
- If the unit does not operate properly, disconnect the AC adaptor cord and LAN cable, then connect again.
- The unit may not operate in the event of a power failure. Ensure that a separate telephone, not dependent on local power, is available for use in case of emergency.
- Do not move the unit while it is in use.
- To prevent malfunction, deformity, overheating, rust, and discolouration, do not install or place equipment in the following types of locations:
 - Locations exposed to direct sunlight.
 - Locations where the temperature is less than 0 °C or greater than 40 °C.
 - Locations where there is high humidity.
 - Locations where air ventilation is poor.
 - Locations that may be exposed to sulphurous gas, such as near hot springs.
 - Near devices that emit heat, such as heaters.
 - Near devices that emit electromagnetic noise, such as radios or televisions.
 - Near devices that emit high-frequency noise, such as sewing machines or welders.
- Do not place credit cards, ATM cards, or other magnetic cards near the unit. The magnets in the unit's speaker and microphones may damage magnetic cards.
- If an error message is shown on the unit's display, consult the network administrator.
- Satisfactory operation, interoperability, and compatibility cannot be guaranteed with all equipment connected to the unit, nor with all services provided by telecommunications providers over networks connected to the unit.

For Best Performance

- Use the unit in a quiet room. Ambient noise of less than 50 dBA is recommended.
- Use the unit in a room with minimal echoing. Do not place the unit near walls, windows, partitions, etc.
- During the first 30 seconds of a TEL call, the unit adjusts itself for optimal sound quality. Speak in turns with the other party at the beginning of a conversation. (The time required varies depending on the condition of the telephone line and the audio characteristics of the room.) During this time, sound may cut out or fade in and out. This is normal.
- Do not obstruct the unit during calls. Keep your hands, as well as common objects such as folders, cups, and coffee pots away from the unit during calls.

Data Security

We recommend observing the security precautions described in this section, in order to prevent the following:

- loss, disclosure, falsification, or theft of user information
- unauthorised use of the unit
- interference or suspension of use caused by an unauthorised party

We cannot be responsible for damages resulting from the misuse of this product.

<u>Note</u>

- This product can be used to store and log user information. User information is defined as the following:
 - phonebook entry names, phone numbers, and IP addresses
 - call history (redial list)
 - recordings stored on the SD memory card

Preventing Data Loss

- Use a computer to make periodic backups of recordings stored on the SD memory card.
- Keep a separate record of all information stored in the phonebook.

Preventing Data Disclosure

- Do not leave the unit or SD memory card in a location where it can be accessed or removed without authorisation.
- Store backups in a secure location.
- Do not store sensitive personal information in the unit.
- In the following situations, make a record of information stored in the phonebook, initialise the unit (see page 59), and remove the SD memory card from the unit.
 - Before disposing of the unit
 - Before handing the unit over to a third partyBefore having the unit serviced
- Make sure the unit is serviced by only a certified technician.

Preventing Data Disclosure Over the Network

- To ensure the security of private conversations, only connect the unit to a secure network.
- To prevent unauthorised access, only connect the unit to a network that is properly managed.
- Make sure all computers connected to the unit employ up-to-date security measures.

Additional Information

For Users in the United Kingdom

• This unit is designed to aid the visually handicapped to locate dial keys and buttons.

For Users in Canada

- This Class B digital apparatus complies with Canadian ICES-003.
- This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications.
- The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

The Ringer Equivalence Number of this unit is noted on the label affixed to the bottom of the unit.

CAUTION

• To reduce the risk of fire, use only No. 26 AWG or larger telephone line cord.

For Users in New Zealand

- This equipment shall not be set to make automatic calls to the Telecom '111' Emergency Service.
- The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.
- All persons using this device for recording telephone conversations shall comply with New Zealand law. This requires that at least one party to the conversation is to be aware that it is being recorded. In addition, the principles enumerated in the Privacy Act 1993 shall be complied with in respect to the nature of the personal information collected, the purpose for its collection, how it is used, and what is disclosed to any other party.
- This equipment must not be programmed for decadic (pulse) dialling in New Zealand because Telecom's support for this has been withdrawn.
 DTMF (tone) dialling is considerably faster and is fully supported and compatible.

IMPORTANT NOTICE

Under power failure conditions, this equipment may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

For Users in Taiwan

A lithium battery can be found on the circuit board of this unit.

<u>Note</u>

- When disposing of any of the above products, all batteries must be removed. Follow the applicable laws, regulations, and guidelines in your country/area regarding disposal of batteries.
- When replacing a battery, use only the same battery type, or an equivalent recommended by the battery manufacturer.

<u>Notice</u>

• Regarding removing or replacing a battery in the circuit board, consult your dealer.



Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



Information on disposal in other countries outside the European Union

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Table of Contents

Accessory Information 16 Unit Overview 17 Main View 17 Front Panel 18 Understanding the Display 20 Function Buttons and Function Button Icons 20 Preparation 23 Basic Connections 23 Changing the Language 25 Settings the Language 25 Setting the Date & Time 25 TEL Line Settings 26 IP Network Settings 26 SIP Settings 27 Using SD Memory Cards 28 Formatting SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Editing Entries 38 Erasing Entries 38 Erasing Entries 38 Erasing Entries 38 Erasing Recordings 41	Before Use	16
Unit Overview 17 Main View 17 Front Panel 18 Understanding the Display 20 Function Buttons and Function Button Icons 20 Preparation 23 Basic Connections 23 Changing the Language 25 Setting the Date & Time 25 TEL Line Settings 26 SIP Settings 27 IP Network Settings 26 SIP Settings 27 IP Line Operation Mode 27 Using SD Memory Cards 29 Using SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making Conference Calls 33 Making Conference Calls 34 Answering Calls 32 Line Selection 32 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Editing Entries 39 Character Tables 40 <td>Accessory Information</td> <td>16</td>	Accessory Information	16
Main View 17 Front Panel 18 Understanding the Display 20 Function Buttons and Function Button Icons 20 Preparation 23 Basic Connections 23 Changing the Language 25 Sotting the Date & Time 25 TEL Line Settings 26 SIP Settings 26 SIP Settings 27 IP Line Operation Mode 27 Using SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making Calls 32 Line Selection 32 Making Calls 33 Making Calls 34 Answering Calls 38 Adding Entries to the Phonebook 38 Adding Entries 39 Charing Recordings 41 Recording Conversations 41 Recording Conversations 41 Recording Conversations 41 Programming the Unit 43 Using a Portable Station (PS) 43 </td <td>Unit Overview</td> <td></td>	Unit Overview	
Profil Parties 20 Function Buttons and Function Button Icons 20 Preparation 23 Basic Connections 23 Changing the Language 25 Setting the Date & Time 25 TEL Line Settings 26 SIP Settings 26 SIP Settings 27 Using SD Memory Cards 28 Formatting SD Memory Cards 29 Using SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making Calls 32 Line Selection 32 Making Calls 33 Making Calls 34 Answering Calls 34 Anstring Entries <td>Main View</td> <td></td>	Main View	
Function Buttons and Function Button Icons 20 Preparation 23 Basic Connections 23 Changing the Language 25 Setting the Date & Time 25 TEL Line Settings 26 SIP Settings 26 SIP Settings 26 SIP Settings 27 IP Line Operation Mode 27 Using SD Memory Cards 29 Valing SD Memory Cards 29 Using Inte Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making Calls 32 Making Calls 33 Making Calls 33 Making Calls 34 Answering Calls 36 Adding Entries to the Phonebook 38 Erasing Entries 39 Character Tables 40 Recording 41 Recording Conversations 41 Recording Conversations 41 Programming the Unit 42 Programming the Unit 43 Using a Portable Station (PS) 43	Front Panel	۱۵ 20
Preparation 23 Basic Connections 23 Changing the Language 25 Setting the Date & Time 25 Setting the Date & Time 25 TEL Line Settings 26 SIP Settings 27 IP Network Settings 26 SIP Settings 27 Using SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries 38 Editing Entries 39 Character Tables 40 Recording Conversations 41 Programming the Unit <td< td=""><td>Function Buttons and Function Button Icons</td><td></td></td<>	Function Buttons and Function Button Icons	
Proparation 23 Basic Connections 23 Changing the Language 25 Setting the Date & Time 25 TEL Line Settings 26 SIP Settings 26 SIP Settings 26 SIP Settings 27 Using SD Memory Cards 28 Formatting SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making Calls 32 Line Selection 32 Making Calls 33 Making Calls 33 Making Calls 33 Making Calls 34 Answering Calls 38 Adding Entries to the Phonebook 38 Erasing Entries 39 Character Tables 40 Recording Voice Memos 41 Recording Conversations 41 Recording Settings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) or Computer 43 Using a Conputer 44	Proparation	
Desice Ordinact Control 25 Setting the Date & Time 25 Setting the Date & Time 25 TEL Line Settings 25 IP Network Settings 26 SIP Settings 26 SIP Settings 26 SIP Settings 27 IP Line Operation Mode 27 Using SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making Calls 32 Making Calls 32 Making Calls 33 Making Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries 38 Erasing Entries 39 Character Tables 40 Recording Features 41 Recording Conversations 41 Recording Vice Memos 41 Playing Back Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Confirming Settings 4	Resic Connections	2 3 22
Setting the Date & Time 25 TEL Line Settings 26 IP Network Settings 26 SIP Settings 27 IP Line Operation Mode 27 Using SD Memory Cards 28 Formatting SD Memory Cards 29 Using SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 38 Character Tables 40 Recording Conversations 41 Recording Conversations 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43	Changing the Language	23
TEL Line Settings 25 IP Network Settings 26 SIP Settings 27 IP Line Operation Mode 27 Using SD Memory Cards 28 Formating SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Calls 33 Making Calls 34 Answering Calls 34 Secording Conference Calls 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recordin	Setting the Date & Time	25
IP Network Settlings 26 SIP Settlings 27 IP Line Operation Mode 27 Using SD Memory Cards 28 Formatting SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Conference Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Editing Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Voice Memos 41 Playing Back Recordings 41 Itang a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Changing Metures 45	TEL Line Settings	25
SH Settings 27 IP Line Operation Mode 27 Using SD Memory Cards 28 Formatting SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Conference Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording 41 Recording Conversations 41 Recording Conversations 41 Playing Back Recordings 41 Programming the Unit 45 Changing and Confirming Settings 45 Changing Settings 45 Changing Settings 45 Making Conference Calls 46 Parameters 47 Using a Portable Station (PS) 45	IP Network Settings	
Using SD Memory Cards 28 Formatting SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Calls 33 Making Calls 33 Making Calls 34 Answering Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording 41 Recording Conversations 41 Recording Conversations 41 Programming the Unit 42 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Changing Settings 45 Parameters 48 Show IP Address 48	SIP Settings	27 27
Formatting SD Memory Cards 29 Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Calls 33 Making Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Conversations 41 Playing Back Recordings 41 Listing a Portable Station (PS) or Computer 43 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing Settings 45 Changing Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48	Using SD Memory Cards	
Using the Microphones 30 Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Calls 33 Making Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Changing Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Formatting SD Memory Cards	
Installing and Uninstalling Conferencing Phone Manager 31 Making and Answering Calls 32 Line Selection 32 Making Conference Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording Features 41 Recording Features 41 Recording Features 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Changing Settings 45 Parameter List 46 Parameters 48	Using the Microphones	30
Making and Answering Calls 32 Line Selection 32 Making Calls 33 Making Conference Calls 34 Answering Calls 34 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Voice Memos 41 Playing Back Recordings 41 Playing Back Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing Settings 45 Changing Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48	Installing and Uninstalling Conferencing Phone Manager	31
Line Selection 32 Making Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Conversations 41 Recording Noice Memos 41 Playing Back Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Making and Answering Calls	32
Making Calls 33 Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 38 Editing Entries 39 Character Tables 39 Character Tables 40 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Line Selection	32
Making Conference Calls 34 Answering Calls 36 Useful Features Available During a Call 37 Phonebook 38 Adding Entries to the Phonebook 38 Editing Entries 38 Editing Entries 39 Character Tables 39 Character Tables 40 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Parameter List 46 Parameter S 48 Show IP Address 48	Making Calls	33
Answering Calls	Making Conference Calls	
Phonebook .38 Adding Entries to the Phonebook .38 Editing Entries .38 Erasing Entries .39 Character Tables .40 Recording .41 Recording Features .41 Recording Conversations .41 Recording Voice Memos .41 Playing Back Recordings .41 Erasing Recordings .42 Using a Portable Station (PS) or Computer .43 Using a Portable Station (PS) .43 Using a Computer .44 Programming the Unit .45 Changing and Confirming Settings .45 Restarting the Unit .45 Parameter List .46 Parameters .48 Show IP Address .48	Answering Calls Useful Features Available During a Call	
Phonebook 36 Adding Entries to the Phonebook 38 Editing Entries 38 Erasing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48		
Adding Entries to the Phonebook 38 Editing Entries 38 Erasing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48		
Euting Entries 30 Erasing Entries 39 Character Tables 40 Recording 41 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Adding Entries to the Phonebook	
Character Tables 40 Recording 41 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Frasing Entries	
Recording 41 Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Character Tables	40
Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Recording	11
Recording Features 41 Recording Conversations 41 Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Decending Factures	۱ ۱ ۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰
Recording Voice Memos 41 Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Restarting the Unit 45 Restarting the Unit 45 Show IP Address 48	Recording Features	41 <i>1</i> 1
Playing Back Recordings 41 Erasing Recordings 42 Using a Portable Station (PS) or Computer 43 Using a Portable Station (PS) 43 Using a Computer 44 Programming the Unit 45 Changing and Confirming Settings 45 Changing Settings 45 Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Recording Voice Memos	
Erasing Recordings	Playing Back Recordings	41
Using a Portable Station (PS) or Computer .43 Using a Portable Station (PS) .43 Using a Computer .44 Programming the Unit .45 Changing and Confirming Settings .45 Changing Settings .45 Restarting the Unit .45 Parameter List .46 Parameters .48 Show IP Address .48	Erasing Recordings	42
Using a Portable Station (PS)	Using a Portable Station (PS) or Computer	43
Using a Computer	Using a Portable Station (PS)	43
Programming the Unit	Using a Computer	44
Changing and Confirming Settings	Programming the Unit	45
Changing Settings	Changing and Confirming Settings	45
Restarting the Unit 45 Parameter List 46 Parameters 48 Show IP Address 48	Changing Settings	45
Parameter List	Restarting the Unit	45
48 Average Address	Parameter List	
	Parameters	48 ⊿ຂ

Operation Mode	48
Basic Settings	49
Line Selection	51
TEL Settings	51
IP Network Settings	52
Protocol Settings	53
VoIP Settings	55
QoS Settings	56
System Status Confirmation	57
System Options	57
Initialisation Features	59
Erasing Data	
Erasing the Redial List	
Erasing the Phonebook	
Resetting System Data	
Resetting All Data	
Conferencing Phone Manager	60
	00
Using Conferencing Phone Manager	
Operating the Unit Using Conferencing Phone Manager	60
Operating the Unit Using Conferencing Phone Manager	60
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Postarting the Unit Using Conferencing Phone Manager	60 61
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager	60 61 61
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting	60 61 61
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting Troubleshooting	60 61 61 62 62
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use	60 61 61 62 62 62
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls	
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality	
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards	
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook	60 61 61 62 62 62 62 62 62 64 64 66
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming	60 61 61 62 62 62 62 62 62 64 64 66 66 66
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming Display Messages	60 61 61 62 62 62 62 62 62 64 64 66 66 66 67 67
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming Display Messages	60 61 61 62 62 62 62 62 62 64 64 66 66 67 67 70
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming Display Messages Other Information Cleaning the Unit	60 61 61 62 62 62 62 62 62 62 64 66 66 66 67 67 70 70
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming Display Messages Other Information Cleaning the Unit	60 61 61 62 62 62 62 62 64 64 66 66 67 67 70 70 70
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming Display Messages Other Information Cleaning the Unit Specifications	60 61 61 62 62 62 62 62 62 64 66 66 66 67 67 70 70 70 71
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming Display Messages Other Information Cleaning the Unit Specifications Specifications	60 61 61 62 62 62 62 62 64 64 66 66 67 67 70 70 70 71 71
Operating the Unit Using Conferencing Phone Manager Programming the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Restarting the Unit Using Conferencing Phone Manager Troubleshooting General Use Making and Receiving Calls Sound Quality SD Memory Cards Phonebook Programming Display Messages Other Information Cleaning the Unit Specifications Specifications	60 61 61 62 62 62 62 62 64 64 66 66 67 67 70 70 70 70 71 71 73

Accessory Information

Included Accessories



^{*1} Actual appearance of AC adaptor varies by country or area.

Optional Accessories



Unit Overview

Main View



Speaker

Indicators (4 locations)

Indicate the status of the unit. Off: The unit is in standby mode (i.e., not in use). Blue, flashing: A call is being received. Blue, lit: The unit is on a call. Red, lit: The microphones are muted, or an error has occurred.

Built-in Microphones (4 locations) See page 30.

4 USB Port (USB)

Used to connect the unit to a computer and use the included Conferencing Phone Manager software (see page 60).

SD Memory Card Slot

Allows you to insert a compatible SD memory card and record conversations. See page 28 for more information about SD memory cards.

AUDIO IN/OUT Jack

Allows you to connect a compatible Panasonic Portable Station (PS; see page 43) or a computer (see page 44).



External Wired MIC Jacks (EXT MIC1, EXT MIC2)

Allow you to connect an External Wired MIC to the unit (see page 30). 2 mics can be connected.

OC Input (DC IN)

Used to connect the unit to an AC outlet using the included AC adaptor.

LAN Port (LAN)

Used to connect the unit to an IP network. May also be used to supply power to the unit using PoE (Power over Ethernet) when the unit is connected to a PoE-compatible switching hub or power supply (see page 23).

Telephone Jack (LINE)

Used to connect the unit to a telephone network or PBX.

Front Panel

Unit appearance varies by country or area.





KX-NT700NE



KX-NT700RU



Û	ୟ Button (Speakerphone Button)
	Used to make, answer, and end calls.
0	Navigator/Volume Buttons ([\land] and [\checkmark])
	Used to scroll through the items displayed on the display, such as phonebook entries, programmable
_	(see page 36).
0	🧞 ∕ C Button (Mute/Clear Button)
	Used to erase characters or numbers while storing a phonebook entry or making a call. Also used to mute the unit's microphones during a call (see page 37).
4	FLASH/R Button
	Used to operate optional telephone company services, such as call waiting, or PBX features, such as extension transfers (see page 37).
6	REDIAL/PAUSE/CD/CD Button
	Used to call a previously called party again (see page 34) or to enter a dialling pause (see page 34).
6	Display
	See page 20.
0	Function Buttons ([F1], [F2], and [F3])
	Used to select the functions that correspond to the icons shown on the bottom of the display (see page 20).
8	MIC NOISE CUT/D
	Used to reduce noise in the audio signal sent to the other party during a call (see page 37).
9	BACK Button
	Used to return to the previous screen.
0	MENU Button
	Used to enter the programming menu or to return the unit to standby mode.
Ð	ENTER Button
	Used to save or confirm information shown on the display.

Playback Control Buttons

Used to control playback when playing back recordings (see page 41).

Understanding the Display

The display helps you operate and program the unit by displaying a variety of messages and icons.

Standby Mode

Phonebook



SD Icon

Indicates that a compatible SD memory card has been inserted in the unit (see page 28).

USB Icon

Indicates that a computer is connected to the USB port (see page 60).

3 Line Icon (IP, TEL, PS, PC)

Indicates which line will be used when a call is made.

Function Button Icons

Indicates the functions currently available when the function buttons are pressed. The icons displayed vary on the current state of the unit (e.g., the icons displayed when on a call are different from the icons displayed when storing an entry in the phonebook).

5 Scroll Indicator

Indicates that $[\land]$ or $[\checkmark]$ can be pressed to display the previous or next item.

Recording Icons

. Indicates a recorded conversation.

Function Buttons and Function Button Icons

By pressing a function button (**[F1]**, **[F2]**, and **[F3]**) you can select the function displayed directly above it. The functions that correspond to each function button are indicated by each function button icon.



In this document, function buttons are referred to by their corresponding icons.

In the example shown here,

"Press PLAY ",

"Press TEL ", or

"Press 💟 "

would indicate pressing [F1], [F2], and [F3], respectively.

Function Button Icons

Operation	lcon	Description				
	TEL	Used to select the TEL line. Only displayed when the "Line Selection" setting is set to "IP + TEL" (see page 25).				
Line Selection	IP	Used to select the IP line.				
	PS	Used to select the PS line. Only displayed when the "Line Selection" setting is set to "IP + PS" (see page 43).				
	PC	Used to select the PC line. Only displayed when the "Line Selection" setting is set to "IP + PC" (see page 44).				
	LINE	Used to change the "Line Selection" setting (see page 32).				
	ANSWER	Used to answer an incoming call (see page 36).				
	REJECT	Used to reject an incoming call (see page 36).				
Starting and Ending		Used to make a call (see page 33).				
Calls	END	Used to end the current call.				
	CONF	Used to establish a conference call (see page 34 and page 36).				
	SPEED	Used to slow down the other party's speech while on a call (see page 37).				
	8	Used to open the phonebook (see page 38).				
	ADD	Used to add an entry to the phonebook (see page 38).				
	EDIT	Used to edit a phonebook entry (see page 38).				
Phonebook	CHAR	Used to switch between alphabet entry mode and extended entry mode (see page 40).				
	<	Used to move the cursor to the left.				
	>	Used to move the cursor to the right.				
	ERASE	Used to erase an entry in the phonebook (see page 39).				
	REC	Used to start recording to the SD memory card (see page 41).				
	PLAY	Used to play the selected recording (see page 41).				
Recording and	STOP	Used to stop recording (see page 41).				
Playback	•	Used to rewind the current recording (see page 42).				
	▶	Used to fast forward the current recording (see page 42).				
	ERASE	Used to erase a recording (see page 42).				

Before Use

Operation	Icon	Description				
	BACK	Used to return to the previous screen.				
	SELECT	Used to select the displayed item.				
Other	SAVE	Used to save any changes made while programming the unit.				
Other	YES	Used to accept the displayed item or proceed with the current operation.				
	NO	Used to decline the displayed item or cancel the current operation.				
	FORMAT	Used to format an SD memory card (see page 29).				

Basic Connections

This section explains all connections needed to make and receive IP line and TEL line calls. To connect a Portable Station (PS) or computer to the unit, see page 43 or page 44, respectively.



KX-NT700NE/UK/RU/BX: use the included AC cord

1. Connect the unit to the desired IP network and/or telephone line.

- To connect to an IP network, connect a category 5 LAN cable to the LAN port and to a switching hub.
- To connect to a telephone line, connect a telephone cord to the LINE jack and to a modular telephone jack.
- 2. Connect the AC adaptor cord of the included AC adaptor to the unit's DC input.
 - To use PoE (Power over Ethernet), connect the LAN cable to a PoE-compatible (IEEE802.3af) switching hub or power supply. The included AC adaptor does not need to be connected when using PoE.
 - If using an AC adaptor, use only the included AC adaptor.
 - Pass the AC adaptor cord through the groove on the bottom of the unit.
- 3. KX-NT700C/AL/NZ: Connect the AC adaptor to the AC outlet.

KX-NT700NE/UK/RU/BX: Connect the AC cord to the AC adaptor, then connect the AC cord to the AC outlet.

• If "Select Country" is displayed after the unit turns on, press [^] or [~] repeatedly to select the country of use, then press SAVE.

<u>Note</u>

• The AC adaptor must remain connected at all times (unless the unit is powered by PoE). It is normal for the adaptor to feel warm during use.

Changing the Language

- 1. Press [MENU].
- 2. Press [^] 10 times.
- 3. Press [ENTER] two times.
- **4.** Press [∧] or [∨] repeatedly to select the desired language.
- 5. Press [ENTER], then press [MENU].

Setting the Date & Time

Set the unit's date and time setting before using the unit. The date and time are shown on the display in standby mode, and are displayed when playing conversations that were recorded to an SD memory card.

- 1. Press [MENU].
- 2. Select "Basic Settings", then press SELECT .
- 3. Select "Date & Time", then press SELECT .
- **4.** Using the keypad, enter 2 digits each for the year, month, day of the month, hour (24-hour format), and minute.

Example: To enter "Jan. 23, 2008, 7:45 PM", press [0801231945].

- If you make a mistake, press to move the cursor as needed, then enter the correct number.
- 5. Press SAVE .
- 6. Press [MENU].

<u>Note</u>

- You can select 12-hour or 24-hour time display (see page 50).
- The date format varies by the selection made for the "Language" setting. See page 49 for details.

TEL Line Settings

Selecting the Available Lines

To use the TEL line, the "Line Selection" setting must be set to "IP + TEL". (This is the default setting.)

- 1. Press [MENU].
- 2. Press LINE .
- 3. Select "IP + TEL".
 - When "Line Selection" is set to "IP + PC" or "IP + PS", TEL calls cannot be made or received.
- 4. Press SAVE .
- 5. Press [MENU].

Setting the Dial Mode

Set the dial mode to "Pulse" if the TEL line does not support tone dialling.

- 1. Press [MENU].
- 2. Select "TEL Settings", then press SELECT .
- 3. Select "Dial Mode", then press SELECT .
- 4. Select "Pulse" Or "Tone".
- 5. Press SAVE .
- 6. Press [MENU].

IP Network Settings

To properly connect the unit to an IP network, the following settings must be set to match the settings of the IP network. Consult your system administrator for the appropriate settings.

- IP address mode: Automatic (DHCP) or manual (static) IP address assignment (default: static)
- IP address (when static connection mode is selected; default: 192.168.0.2)
- Subnet mask (when static connection mode is selected; default: 255.255.255.0)
- Default gateway (when static connection mode is selected; default: 0.0.0.0)

Note

IP addresses can be entered using the keypad.
 [0]–[9] are used to enter numbers and [*] is used to enter a period. For example, to enter "192.168.0.1", press [192*168*0*1].

Automatic Assignment (DHCP)

- 1. Press [MENU].
- 2. Select "IP Network Settings", then press SELECT .
- 3. Select "IP Address Mode", then press SELECT .
- 4. Select "DHCP", then press SAVE .
- 5. Press [MENU].

Note

- If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45).
- To confirm the IP address, press
 [MENU]→"Show IP Address"→ SELECT.

Manual Assignment (Static)

- 1. Press [MENU].
- 2. Select "IP Network Settings", then press SELECT .
- 3. Select "IP Address Mode", then press SELECT .
- 4. Select "Static", then press SAVE .
- 5. Select "IP Address", then press SELECT .
- 6. Enter the IP address to be assigned to the unit, then press **SAVE**.
- 7. Select "Subnet Mask", then press SELECT .
- 8. Enter the subnet mask, then press **SAVE**.
- 9. Select "Default Gateway", then press SELECT .
- **10.** Enter the IP address of the default gateway, then press **SAVE**.
- 11. Press [MENU].

<u>Note</u>

- If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45).
- To confirm the IP address, press
 [MENU]→[Show IP Address]→ SELCT .

SIP Settings

To use the unit as a SIP extension of the PBX, the unit must be registered as a SIP extension through PBX programming, the "Operation Mode" setting must be set to "IP-PBX" (see page 27), and the following settings must be set to match the settings of the PBX. Consult your system administrator for the appropriate settings. Refer to the PBX documentation to register the unit as a SIP extension.

- 1. Press [MENU].
- 2. Select "Protocol Settings", then press SELECT .
- 3. Select "SIP Ext. No.", then press SELECT .
- **4.** Enter the unit's extension number (max. 32 digits), then press **SAVE**.
- 5. Select "SIP Password", then press SELECT .
- 6. Enter the password (max. 32 characters), then press [ENTER].
 - Press **CHAR** to switch between numeric and alphabet entry modes.
 - Press [*] to change between uppercase and lowercase character entry.
 - See page 38 and page 40 for information on entering characters.
- 7. Select "SIP User Domain Name", then press SELECT .
- 8. Enter the IP address of the PBX, then press SAVE .
- 9. Select "SIP Proxy Server IP Address", then press SELECT .
- **10.** Enter the IP address of the PBX, then press
- **11.** Select "SIP Registrar IP Address", then press SELECT .
- **12.** Enter the IP address of the PBX, then press SAVE .
- 13. Press [MENU].

Note

• If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45).

IP Line Operation Mode

Whether IP calls are made and received using IP-PBX mode or peer to peer mode is determined by the "Operation Mode" setting.

- 1. Press [MENU].
- 2. Select "Operation Mode", then press SELECT .
- 3. Select the desired setting.
 - "IP-PBX": The unit can make and receive IP calls as a SIP extension of the PBX. (This is the default setting.)
 - "Peer to Peer": Peer to peer IP calls are possible. To make a call, the other party's IP address is specified.
- 4. Press SAVE .
- 5. Press [MENU].

<u>Note</u>

• If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45).

Using SD Memory Cards

Conversations can be recorded to the SD memory card. For information on recording conversations, see page 41.

Inserting and Removing Cards

Insert the SD memory card as shown, with the label side facing up. To remove the card, gently push the card to release it, then remove the card.

• When an SD memory card is inserted, **SD** is shown in the upper-left corner of the display.



Important Information

To prevent data corruption or damage to the SD memory card, which may also affect the performance of the unit, keep the following in mind.

- Do not remove the SD memory card, LAN cable, or disconnect the unit from the AC outlet during playback, recording, formatting, or while erasing data on the card.
- Do not move or bump the unit during playback, recording, formatting, or while erasing data on the card.
- Do not touch the contacts on the bottom of the SD memory card.
- To prevent damage to the unit, do not insert any memory card other than a compatible SD memory card.

Compatible Cards

The unit supports the following SD memory cards. – SD, miniSD, and microSD memory cards.

- Use a miniSD or microSD adaptor when using miniSD or microSD memory cards, respectively, and always insert the miniSD or microSD memory card into the adaptor before inserting the adaptor into the unit.
- Cards with a capacity of 32 MB to 2 GB.
- Class 2, Class 4, and Class 6 cards.

<u>Note</u>

• The unit does not support SDHC, miniSDHC, and microSDHC memory cards.

Approximate Recording Time

Capacity	Approx. Recording Time		
2 GB	67 hours		
1 GB	33 hours		
512 MB	17 hours		
256 MB	8 hours		
128 MB	4 hours		
64 MB	2 hours		
32 MB	1 hour		

Write-protection (LOCK)

SD memory cards can be locked to prevent formatting, erasing, and recording. To lock an SD memory card, slide the switch on the side of the card to the "LOCK" position.



Backing Up Data

Data stored on SD memory cards can become corrupted if the card is exposed to electromagnetic fields, static electricity, etc. We recommend using a computer to back up important data stored on SD memory cards.

Formatting SD Memory Cards

If **FORMAT** is displayed, the SD memory card must be formatted; press **FORMAT** to format the card.

Notice

- When an SD memory card is formatted, all information on the card is erased.
- Do not remove the SD memory card, LAN cable, or disconnect the unit from the AC outlet while formatting an SD memory card.
- Do not move or bump the unit while formatting an SD memory card.

<u>Note</u>

• The unit cannot format cards that are not already in FAT format. Use a computer to format non-FAT formatted cards.

Formatting With a Computer

When formatting cards with a computer, select the FAT (FAT16) format.

Notice

• When an SD memory card is formatted, all information on the card is erased.

Using the Microphones

Built-in Microphones

For best performance when using the built-in microphones, speak within about 3 m of the unit.



<u>Note</u>

• The sensitivity of the built-in microphones may vary depending on room characteristics.

External Wired MIC

An optional KX-NT701 External Wired MIC can be connected to the unit using the **EXT MIC1** (①) or **EXT MIC2** (②) jacks. 2 mics can be connected.



For best performance when using an External Wired MIC:

- Do not move an External Wired MIC while on a call. (Feedback may occur.)
- Place each External Wired MIC at least 1 m away from the unit.
- Speak within about 2 m of the External Wired MIC.



Note

- The sensitivity of an External Wired MIC may vary depending on room characteristics.
- The built-in microphones continue to function when an External Wired MIC is connected.
- The indicator of an External Wired MIC indicates unit status the same as the built-in indicators (see page 17).

Installing and Uninstalling Conferencing Phone Manager

The unit can be used in conjunction with Conferencing Phone Manager. This software can be found on the included CD-ROM, and allows you to operate and program the unit using a computer (see page 60).

System Requirements

Supported operating systems

- Microsoft Windows XP (all editions)
- Windows Vista (all editions)

Hardware requirements (when using Windows XP)

- CPU: 1 GHz Intel Pentium or Celeron microprocessor (or a CPU of similar performance)
- Hard disk: at least 1 GB of available space
- RAM: at least 256 MB

Hardware requirements (when using Windows Vista)

- CPU: 1 GHz Intel Pentium or Celeron microprocessor (or a CPU of similar performance)
- Hard disk: at least 1 GB of available space
- RAM: at least 512 MB

Installing Conferencing Phone Manager

To install the software using the following procedure, do not connect the unit to the computer using the USB cable until step 8.

- 1. Insert the included CD-ROM into the computer's CD drive.
 - The CD-ROM's menu is displayed.
- 2. Click [Conferencing Phone Manager].
- 3. Click [OK].
 - The folder containing [Setup.exe] is displayed.
- 4. Double-click [Setup.exe].
- 5. Select the desired language, then click [OK].
 - The software install wizard is displayed.

- **6.** Follow the on-screen instructions and install the software.
 - A dialogue may be displayed that indicates the software has not passed Windows logo testing. This is normal. The software will not cause any difficulties with your operating system. Click [Continue Anyway] to proceed with installation.
- 7. Click [Finish].
 - If **[Launch Conferencing Phone Manager]** is checked, Conferencing Phone Manager will start.
- Connect the included USB cable to the USB port of the unit (1) and of the computer.



- The new hardware wizard is displayed.
- 9. Select [Install the software automatically (Recommended)], then click [Next].
 - A dialogue may be displayed that indicates the software has not passed Windows logo testing. This is normal. The software will not cause any difficulties with your operating system. Click [Continue Anyway] to proceed with installation.
- 10. Click [Finish].

<u>Note</u>

• After installation is complete, a shortcut icon appears on the desktop.

You can click this icon to start Conferencing Phone Manager.



Uninstalling Conferencing Phone Manager

- 1. Click [Start]→[All Programs]→[Panasonic]→[Conferencing Phone Manager], and click [Uninstall].
- 2. Click [Yes].
- 3. Click [Finish].

Line Selection

The unit can make calls using the following lines.

- IP line (see page 33)
- TEL line (see page 33)
- PS line (see page 43)
- PC line (see page 44)

When you make a call, the line icon in the upper-right corner of the display indicates the line that will be used, therefore, you should confirm the line icon each time you make a call.

You can change the selected line by pressing the centre function button (**[F2]**). The line that will be selected is indicated by the function button icon.

Example:

1. The IP line is selected.



2. TEL is pressed. The TEL line is now selected.



Note

If the unit is not connected to an IP network,
 is not displayed and the IP line cannot be selected.

Selecting the Available Lines

The IP line is always available when the unit is connected to an IP network; if it is not selected (i.e., if it is not shown in the upper-right corner of the display),

you can select it by pressing **P**. Whether the TEL line, PS line, or PC line is available is determined by the **"Line Selection"** setting. For example, when it is set to **"IP + PS**", the IP and PS lines are available.

You can change the "Line Selection" setting using the following procedure.

- 1. Press [MENU].
- 2. Press LINE .
- 3. Select the desired setting.
 - "IP + TEL": The IP and TEL lines are available.
 - "IP + PS": The IP and PS lines are available.
 - "IP + PC": The IP and PC lines are available.
- 4. Press SAVE .
- 5. Press [MENU].

Making Calls

- 1. Confirm that the desired line ("IP" or "TEL") is selected.
 - You can change the selected line by pressing the centre function button (**[F2]**).

The IP line is selected.

The TEL line is selected.



- If you cannot select the desired line, change the "Line Selection" setting (see page 32).
- 2. Press [4].
- **3.** For TEL calls: Enter the phone number. For IP calls with IP-PBX connection: Enter the phone number.

For IP calls with peer to peer connection: Enter the IP address, then press [#] or [ENTER].

- IP addresses can be entered using the keypad.
 [0]–[9] are used to enter numbers and [*] is used to enter a period. For example, to enter "192.168.0.1", press [192*168*0*1].
- To temporarily use tone dialling when the line mode is set to pulse mode, press [*].
- After a call starts, the approximate length of the call is shown on the display.
- **4.** To end the call, press [r.].

<u>Note</u>

- To make a call using the phonebook, see page 34.
- To make a call with a Portable Station (PS) or computer connected to the unit, see page 43 or page 44.
- During the first 30 seconds of a TEL call, the unit adjusts itself for optimal sound quality. Speak in turns with the other party at the beginning of a conversation. (The time required varies depending on the condition of the telephone line and the audio characteristics of the room.) During this time, sound may cut out or fade in and out. This is normal.
- If the unit is not connected to an IP network,
 is not displayed and the IP line cannot be selected.

• The call length shown on the display is an approximation and may differ from the actual length of the call. Call charges accumulate after the called party answers.

Adjusting the Speaker Volume

While on a call, press $[\land]$ or $[\checkmark]$ repeatedly to adjust the speaker volume. There are 8 levels of volume.

1	1				
		1			

Quieter

Louder

If the other party has difficulty hearing you, press
 [~] to decrease the speaker volume. Your voice heard by the other party will become louder.

Making a Call After Entering the Phone Number or IP Address

- **1.** Confirm that the desired line ("IP" or "TEL") is selected.
 - You can change the selected line by pressing the centre function button (**[F2]**).

The IP line is selected. The TEL line is selected.



- If you cannot select the desired line, change the "Line Selection" setting (see page 32).
- For TEL calls: Enter the phone number.
 For IP calls with IP-PBX connection: Enter the phone number.

For IP calls with peer to peer connection: Enter the IP address.

- If you make a mistake, press [\screwtop / C], then enter the correct phone number or IP address. To erase all numbers, press and hold [\screwtop / C].
- If a pause is required when making a call on the TEL line, press [REDIAL/PAUSE/○●/⑦] between digits as necessary.
- 3. Press [♣] or .
- **4.** To end the call, press $[\mathbf{r}_{\mathbf{v}}^{\mathsf{c}}]$.

Redialling

The last 10 calls made are stored in the redial list, in order of newest to oldest call.

- 1. Press [REDIAL/PAUSE/◯●/☉].
 - The last call made is displayed.
- 2. Press [∧] or [∨] repeatedly to scroll through the list.
 - To erase the displayed item, press **ERASE**.
 - To exit the redial list, press [MENU].
- 3. When the desired entry is displayed, press [$\mathbf{r}_{\mathbf{t}}^{\mathbf{t}}$] or

``.

- <u>Note</u>
 - The line that was used to make each call in the redial list ("IP" or "TEL") is shown in the lower-right corner of the display. This line will be used when the call is redialled.
 Example:



The TEL line will be used when you redial this number.

- If the "Line Selection" setting is not set to "IP + TEL" (see page 32), TEL line calls cannot be redialled.
- If the dialled number contains too many digits (more than 32 digits for IP calls with IP-PBX connection, more than 128 digits for TEL calls), it cannot be redialled correctly.

Entering Dialling Pauses

A pause is sometimes required when making calls on the TEL line using a PBX or a long distance service. For example, if you must dial "9" before dialling an outside phone number, you probably wait (pause) after dialling "9" until you hear a dial tone.

By pressing the **[REDIAL/PAUSE/\bigcirc/\bigcirc]** button when dialling, the unit will store the dialling pause along with the phone number in the redial list. If you make a call from the redial list later, the unit will dial the number wait for the pre-programmed number of seconds (default: 3 s; see page 52) for each dialling pause you entered.

Example:

- 1. Press [9] (to access an outside line of a PBX).
- 2. Press [REDIAL/PAUSE/OP/Sp].
 - Press [REDIAL/PAUSE/○●/⑦] repeatedly to create longer pauses. An additional pause is

inserted each time [**REDIAL/PAUSE**/ \bigcirc / \bigcirc] is pressed.

- **3.** Dial the phone number.
- 4. Press [♣] or .

Making a Call from the Phonebook

See page 38 to add entries to the phonebook.

- 1. Press
- 2. Press [∧] or [∨] repeatedly to scroll through the phonebook entries.
 - Entries are displayed in the following order when [~] is pressed.
 Symbols→Numbers→Letters
 - Press the dial key corresponding to the desired character, then press [^] or [~] to scroll if necessary.
 - To exit the phonebook, press [MENU].
- 3. When the desired entry is displayed, press $[\mathbf{r}_{\mathbf{x}}]$ or



<u>Note</u>

 The line that was selected when the entry was stored in the phonebook ("IP" or "TEL") is shown in the lower-right corner of the display. This line will be used when the entry is called.

Example:



The TEL line will be used when you call this number.

• If the "Line Selection" setting is not set to "IP + TEL" (see page 32), TEL line numbers cannot be called.

Making Conference Calls

While on a call, you can make another call and establish a conference call (i.e., a 3-party call) including yourself and 2 other parties. You can establish a conference call using the following types of calls.

- 2 IP calls (Peer to peer mode only; see page 27)
- 1 IP call and 1 TEL call
- 1 IP call and 1 PS call
- 1 IP call and 1 PC call

To establish a conference call when you receive a call, see page 36.

Conference calls using the IP and TEL lines

- 1. Press **CONF** to put the current call on hold.
- 2. Confirm that the desired line ("IP" or "TEL") is selected.
 - If the unit is in IP-PBX mode, the available line is automatically selected. Continue from step 3.
 - If the unit is in peer to peer mode and the current call is an IP call, you can change the selected line by pressing the left function button ([F1]).

The IP line is selected. The T

The TEL line is selected.



If you cannot select the desired line, press
 BACK , then change the "Line
 Selection" setting (see page 32). After you have changed the setting, repeat this procedure

have changed the setting, repeat this procedure from step 1.

- **3.** Call the party you want to add to the conversation.
 - You can end the second call and return to the original call by pressing **BACK**.
 - To call a party stored in the phonebook, see page 34.
- **4.** After the called party answers, press **CONF** to begin the conference call.
 - Before beginning the conference call, press
 END to end the second call and return to the original call.

<u>Note</u>

• We recommend setting the "TEL Line Level Reduction" setting to "On" when establishing conference calls that use the TEL line (see page 52).

Adding a PS or PC line call to an IP call

- Confirm that the "Line Selection" setting is set to "IP + PS" or "IP + PC" as necessary (see page 32).
- **2.** Press **CONF** to put the current call on hold.
 - If the unit is in IP-PBX mode, the PS or PC line is automatically selected. Continue from step 4.

3. Peer to peer mode only: Press the left function button (**[F1]**) to select the PS or PC line.

Example: Pressing **PS** to select the PS line.



- 4. Make a call using the PS or computer.
- **5.** After the called party answers, press **CONF** to begin the conference call.
 - Before beginning the conference call, press
 END to end the second call and return to the original call.

Ending a Conference Call

Press $[\mathbf{n}_{1}^{4}]$ to disconnect both parties.

- or
- 1. Press END .
 - Press **BACK** to continue the call.
- 2. Press [∧] or [∨] to select the party you would like to remove from the conference, then press SELECT.
 - The selected party is disconnected and you can continue to speak with the remaining party.
 - To disconnect both parties, select "All", then press SELECT .

Answering Calls

When a call is being received, the type of call being received is shown on the display. Example: "Incoming Call on IP Line"

Notice

- When "Line Selection" (see page 32) is set to "IP + PC" or "IP + PS", TEL calls cannot be made or received.
- 1. Press [I] or ANSWER .
 - The unit does not support Caller ID; caller phone numbers are not displayed when calls are received.
 - You can refuse an incoming call by pressing REJECT .
 - After a call begins, the approximate length of the call is shown on the display.
- 2. To end the call, press [4].

Note

- The other party must know the IP address of the unit in order to call you on the IP line when the unit is in peer to peer mode (see page 27). To confirm the IP address, press [MENU]→"Show IP Address" \rightarrow SELECT .
- During the first 30 seconds of a TEL call, the unit adjusts itself for optimal sound quality. Speak in turns with the other party at the beginning of a conversation. (The time required varies depending on the condition of the telephone line and the audio characteristics of the room.) During this time, sound may cut out or fade in and out. This is normal.

Adjusting the Ringer Volume

When the unit is in standby mode or is receiving a call, press $[\land]$ or $[\checkmark]$ repeatedly to adjust the ringer volume. There are 4 levels of volume, including "Off".



Receiving a Second Call (Call Waiting)

While on a call, you can receive a second call, and then join the 2 calls and establish a conference call. While on an IP call:

You can receive a TEL call. When in peer to peer mode (see page 27), you can receive an additional IP call. While on a TEL, PS, or PC call: You can receive an IP call.

Note

- In order to use this feature, the "Call Waiting" setting (see page 51) must be set to "Enable" (this is the default setting).
- When a second call is received, a call waiting tone will be heard. See page 51 to adjust the call waiting tone volume.

Refusing a second call

Press REJECT . The second caller is disconnected and the current call continues.

Confirming the caller then creating a conference call

- 1. Press ANSWER .
 - The first call is put on hold, and you can talk to the second caller.
 - To end the second call, press **END**, then continue the first call.
- 2. Press **CONF** to establish a conference call.

Creating a conference call immediately

Press CONF .

Ending a conference call

Press [1] to disconnect both parties.

- or 1. Press END .
 - Press **BACK** to continue the call. •
- **2.** Press $[\land]$ or $[\checkmark]$ repeatedly to select the party you would like to remove from the conference, then press SELECT .
 - The selected party is disconnected and you can continue to speak with the remaining party.
 - To disconnect both parties, select "All", then press SELECT .
Useful Features Available During a Call

Mute

You can mute your voice during a conversation. While the mute is turned on, you will be able to hear the other party, but the other party will not be able to hear you. To mute your voice, press [$\langle \rangle \times / C$]. To return to the conversation, press [$\langle \rangle \times / C$] again.

<u>Note</u>

- While the mute is turned on, "Mute" is displayed and the indicators light in red.
- All built-in microphones and each External Wired MIC are muted when the mute is turned on.

Flash

Pressing **[FLASH/R]** allows you to use optional telephone company services, such as call waiting, or PBX features, such as extension transfers.

<u>Note</u>

- To change the flash time, see page 52.
- This feature is not available for IP calls.

Speech Speed Conversion

You can adjust the speed of the other party's speech down during a call by pressing $\hfill \ensuremath{\texttt{SPEED}}\hfill \ensuremath{\texttt{SPEED}}$

The following speech speed modes are available. - Talking Mode (slight speed reduction)

- Recommended for calls in which you and the other party are equally participating in the conversation.
- Listening Mode (greater speed reduction)
 Recommended for calls in which the other party is speaking more, and you are listening.

You can select the desired mode by pressing SPEED during a call. Each time the button is pressed, the setting changes and is shown briefly on the display.



<u>Note</u>

- "Slow" is shown on the display while this feature is active.
- If the other party speaks for more than 5 seconds without stopping, this feature will stop functioning. Once the other party stops talking for about 1 second, this feature will function again.
- When this feature is turned off, the other party's speech may cut out briefly.

Mic Noise Reduction

You can press the [MIC NOISE CUT/ $[D^{-1}]_{T}$] button during a call to reduce the ambient noise that is picked up by the microphones and sent to the other party. Each time the button is pressed, the setting changes and is shown briefly on the display.



<u>Note</u>

- "Noise Cut ON" is shown on the display while this feature is active.
- The quality of the sound heard by the other party decreases slightly while this feature is active.

Adding Entries to the Phonebook

You can add 100 names and phone numbers or IP addresses to the phonebook.

To make a call from the phonebook, see page 34.

1. Press 📭 .

- The display shows the number of entries in the phonebook.
- Entries cannot be added to the phonebook when the PS line or PC line is selected.

2. Press ADD .

- **3.** Enter the name (max. 16 characters), then press **[ENTER]**.
 - See page 40 for information on entering characters.
 - To insert a space when there is no character under the cursor, press
 - To insert a space after the last character entered, press two times.
 - You can also enter a space by pressing **[0]** when in alphabet entry mode or extended entry mode.
- 4. Press [∧] or [∨] to select the line ("IP" or "TEL") that will be used when you call the entry, then press SELECT .
- 5. Enter the phone number (max. 32 digits) or IP address, then press [ENTER] or SAVE .
 - Whether an IP line phonebook entry is assigned a phone number or an IP address is determined by the "Operation Mode" setting (see page 27). When the unit is in IP-PBX mode, each new IP line entry is assigned a phone number. When the unit is in peer to peer mode, each new IP line entry is assigned an IP address.
 - IP addresses can be entered using the keypad.
 [0]–[9] are used to enter numbers and [*] is used to enter a period. For example, to enter "192.168.0.1", press [192*168*0*1].
 - To temporarily use tone dialling when the line mode is set to pulse mode, press [*].
 - If a pause is required when making a call on the TEL line (see page 34), press [REDIAL/ PAUSE/∞/∞] between digits as necessary.
 - To add an another entry, press **ADD**, then continue from step 3.
- 6. Press [MENU].

<u>Note</u>

- If you do not press any buttons for 1 minute, the unit will return to standby mode.
- An entry cannot have both a phone number and an IP address.

Entering Characters

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. To enter a character, press the appropriate dial key, repeatedly if necessary. To enter another character that is assigned to the same dial key, first press to move the cursor to the right.

Character Entry Modes

When adding entries to the phonebook, the following character entry modes are available. The current entry mode is shown in the upper-right corner of the display. **[ABC2]**: Displayed when alphabet entry mode is selected.

[1234]: Displayed when numeric entry mode is selected.

[AÄÅ2]: Displayed when extended entry mode is selected.

Press **CHAR** to switch the character entry mode. Press **[*]** to change between uppercase and lowercase character entry.

See page 40 for a list of all available characters.

Correcting a Mistake

To correct a mistake, press \blacksquare or \blacksquare to move the cursor to the desired position, then follow one of the procedures below.

- To add a character or number, press the appropriate dial key.
- To erase the selected character or number, press
 [\scale_x/C].

To erase all characters and numbers, press and hold [& /C].

Editing Entries

- 1. Search for the desired phonebook entry (see page 34).
- 2. Press EDIT .
- 3. Edit the name if necessary, then press [ENTER].

- Press [∧] or [∨] to select the line ("IP" or "TEL") that will be used when you call the entry, then press
 SELECT .
- 5. Edit the phone number or IP address if necessary, then press [ENTER] or SAVE .
- 6. Press [MENU].

<u>Note</u>

• If you do not press any buttons for 1 minute, the unit will return to standby mode.

Erasing Entries

Erasing 1 Entry

- **1.** Search for the desired phonebook entry (see page 34).
- 2. Press ERASE .
- 3. Press YES .
- To cancel, press NO .
- 4. Press [MENU].

Erasing All Entries

- 1. Press 📭 .
- 2. Press ERASE .
- 3. Press YES .
- 4. Press [MENU].

<u>Note</u>

 You can also erase entries using the "Erase All Phonebook Data" feature (see page 59).

Character Tables

Character Tables

Dial Key	Alphabet Entry Mode	Extended Character Entry Mode
0	Space () < > [] { } 0	Space () < > [] { } 0
1	!"%'*\^_` ~1	!"%'*\^_` ~1
· · ·	A B C 2	A B C À Á Â Ã Ä Å Æ Ç 2
2	a b c 2	a b c à á â ã ä å æ ç 2
2	DEF3	DEFÈÉÊËĨ3
3	def3	d e f è é ê ë ẽ 3
Α	G H I 4	GHIĞÌÍÎÏĨİĬ4
4	ghi4	ghiğìíîïīlĭ4
5	J K L 5	J K L 5
U	j k l 5	j k l 5
6	M N O 6	ΜΝΟÑÒÓÔÕÖØ6
0	m n o 6	m n o ñ ò ó ô õ ö ø 6
7	PQRS7	PQRSŞß7
1	pqrs7	pqrsşß7
8	Τ U V 8	Τ U V Ù Ú Û Ü Ũ 8
0	t u v 8	t u v ù ú û ü ũ 8
٥	W X Y Z 9	WXYZŴŶ9
5	w x y z 9	wxyzŵŷ9
*	Changes between uppercase and lowercase character entry.	Changes between uppercase and lowercase character entry.
#	\$ & + , / : ; = ? @ #	\$ & + , / : ; = ? @ #

<u>Note</u>

• A space counts as one character.

Recording Features

Conversations and voice memos can be recorded to an SD memory card.

SD Memory Card Information

Confirm the following before recording to an SD memory card.

- A compatible card is inserted (see page 28)
- When an SD memory card is inserted, D is shown in the upper-left corner of the display.
- The card has been formatted using the correct format (see page 29).
- The card is not locked (see page 28).
 - If you insert a locked card, "Write Protected" is displayed.

<u>Note</u>

- No more than 100 recordings can be made, regardless of the SD memory card capacity.
- When "Memory Full" is displayed, recording is not possible until other recordings are erased. If the card becomes full while recording, recording will stop.

See page 28 for information on approximate recording time.

- While recording, if the amount of recording time available is less than 6 minutes, "Remaining Time Less Than 6 Min." is displayed briefly, and the display's backlight flashes until recording stops. When less than 1 minute is available, "Remaining Time Less Than 1 Min." is briefly displayed.
- When recording telephone conversations, we recommend informing the other party that the conversation is being recorded.
- Be sure to comply with applicable local regulations (laws, ordinances, guidelines, etc.) regarding telephone conversation recording.

Recording Conversations

- **1.** Press **REC** during a conversation.
 - "Remaining Time" and the approximate recording time available are displayed briefly, then "Conf Recording" and the approximate length of the call are displayed.
- 2. To stop recording, press STOP .
 - Recording stops automatically when [式] is pressed.

Recording Voice Memos

Voice memos (i.e., recordings made when you are not on a call) can also be recorded.

- 1. Press [MENU] while you are not on a call.
- 2. Select "Voice Memo", then press REC .
 - "Remaining Time" and the approximate recording time available are displayed briefly, then "Memo Recording" and the approximate length of the call are displayed.
- 3. To stop recording, press **STOP**.
 - Recording stops automatically when a call is received.

Playing Back Recordings

- 1. Press PLAY .
- 2. Press [∧] or [∨] repeatedly to scroll through the list of recordings, then press SELECT.
 - Recorded conversations are displayed as
 plus the date and time of the recording.
 Voice memos are displayed as
 plus the date and time of the recording.

3. Press PLAY .

- Press [BACK] to stop playback.
- If the selected recording is less than 1 second long, "Unable To Use" is displayed and the recording cannot be played back.
- 4. Press [MENU] to exit.

<u>Note</u>

 Recordings are saved in PCM format and can be played back on a computer using Windows Media® Player or QuickTime®. Recordings are stored on the SD memory card in the following folder: "\\PRIVATE\MEIGROUP\PCC\IPSP".

- When accessed by a computer, recordings are displayed as "REC" plus a 3 digit number (000– 100; the lowest available number is used when a file is saved on the SD memory card). The file extension is ".WAV".
 - Example: "REC001.WAV"
- If the names of files or folders are changed using a computer, the recordings cannot be played back using the unit.

Features Available During Playback

The following features are available during playback.

Feature	Operation	
Volume control	Press [∧] or [∨]	
Play next recording	Press [#] ([►►]) then PLAY	
Play current recording again	Press [*] ([н◄]) then PLAY	
Play previous recording	Press [★] ([щ]) 2 times, then PLAY	
Fast forward	Press >> for 4× speed Press >> again for 60× speed Press PLAY for playback	
Rewind	Press Image: for 4× speed Press Image: for 60× speed Press Image: for playback	
Pause	Press [0] ([II]) Press PLAY to resume playback	
Erase current recording	Press [ERASE], then [YES].	

Erasing Recordings

Erasing 1 Recording

- 1. Press PLAY .
- 2. Press [^] or [~] repeatedly to scroll through the list of recordings, then press **ERASE**.
- 3. Press YES .
 - "Erased" is displayed.
- 4. Press [MENU].

<u>Note</u>

• To erase a recording while listening to it, press **ERASE**, then press **YES**.

Erasing All Recordings

- 1. Press PLAY .
- 2. Press ERASE .
- 3. Press YES .
 - "All Erased" is displayed.

Using a Portable Station (PS)

By connecting the unit to a PS, you can use the unit's microphones and speaker for calls made or received with the PS.

Compatible Portable Stations (as of July, 2008)

- KX-TCA155 KX-TCA256
- KX-TCA255 KX-TCA355
- KX-TD7680 KX-TD7685
- KX-TD7690 KX-TD7695
- KX-TD7684 KX-TD7696
- KX-TD7694

Note

Product availability may vary by country or area.

Line Selection (IP + PS)

- 1. Press [MENU].
- 2. Press LINE .
- 3. Select "IP + PS".
 - When "Line Selection" is set to "IP + PS", TEL calls cannot be made or received.
- 4. Press SAVE .
- 5. Press [MENU].

Using a PS

- 1. Confirm that "**PS**" is shown in the upper-right corner of the display.
 - You can change the selected line by pressing the centre function button (**[F2]**).

The IP line is selected.

The PS line is selected.



- If you cannot select "PS", change the "Line Selection" setting to "IP + PS" (explained on this page).
- 2. Make or answer a call using the PS.
- Connect the included PS Cable to the [AUDIO IN/ OUT] jack of the unit (●), and to the headset jack of the PS.



- Make sure the plug of the PS Cable is inserted fully into the unit and PS, otherwise sound may not be heard, or echoing and feedback may occur.
- Place the PS as far away from the unit as possible.
- **4.** Press [rd;] to begin using the unit's microphones and speaker.
 - Press [r⁴→] again to turn off the microphones and speaker.
- 5. Use the PS to end the call.
- 6. Turn off the unit's microphones and speaker by pressing [r.].

<u>Note</u>

- For best performance, we recommend setting the receiver volume of the PS as follows:
 - 4-volume level models: level 3
 - 6-volume level models: level 4
- For best performance, do not change the speaker (receiver) volume of the PS frequently during a call. Echoing or feedback may occur.
- The microphone and receiver of the PS cannot be used while the PS is connected to the unit.
- This feature will not function when a mobile phone or incompatible PS is connected to the unit.

Using a Computer

By connecting the unit to a computer, you can use the unit's microphones and speaker for calls made or received with the computer using your preferred IP phone software.

Connecting a Computer

Connect the included PC Cable to the **[AUDIO IN/OUT]** jack of the unit (1), and to the microphone jack (red plug; 2) and headphone jack (green plug; 3) of the computer.



<u>Note</u>

• The microphone and speaker of the computer cannot be used while the computer is connected to the unit.

Line Selection (IP + PC)

- 1. Press [MENU].
- 2. Press LINE .
- 3. Select "IP + PC".
 - When "Line Selection" is set to "IP + PC", TEL calls cannot be made or received.
- 4. Press SAVE .
- 5. Press [MENU].

Using a Computer

- 1. Confirm that "PC" is shown in the upper-right corner of the display.
 - You can change the selected line by pressing the centre function button (**[F2]**).

The IP line is selected.

The PC line is selected.



- If you cannot select "PC", change the "Line Selection" setting to "IP + PC" (explained on this page).
- 2. Press [rd;] to begin using the unit's microphones and speaker.
 - Press [rd;] again to turn off the microphones and speaker.
- **3.** Use the desired computer software to make or answer a call.
- 4. Use the computer to end the call.
- 5. Turn off the unit's microphones and speaker by pressing [r.].

<u>Note</u>

• Leave at least 50 cm of space between the unit and the computer.

Changing and Confirming Settings

Settings can be programmed and confirmed from the front panel. To use Conferencing Phone Manager (found on the included CD-ROM) to program the unit from a computer, see page 61.

Changing Settings

Using the Front Panel

- 1. Press [MENU].
- 2. Press [^] or [~] to select the desired programming category, then press **SELECT**.
- **3.** Press [∧] or [∨] to select the desired parameter, then press **SELECT**.
- **4.** Adjust the settings as desired.
 - To cancel without changing any settings, press
 [MENU].
- 5. Press SAVE .
- 6. Press [MENU].

<u>Note</u>

- When programming the unit from the front panel, the current setting is indicated on the display by "
 <".
- To return to the previous screen, press [BACK].
- If you do not press any buttons for 1 minute, the unit will return to standby mode.
- The following parameters cannot be programmed, and are therefore not displayed, when the unit is in use.
 - Operation Mode
 - Language
 - Date & Time
 - Time Format
 - Ringer Volume
 - Ringtone
 - IP Network Settings (all parameters)
 - Protocol Settings (all parameters)
 - VoIP Settings (all parameters)

- **QoS Settings** (all parameters) Additionally, the following parameters cannot be programmed, and are therefore not displayed, when the TEL, PS, or PC line is in use.

Line Selection

- TEL Settings (all parameters)

Using Conferencing Phone Manager

To use Conferencing Phone Manager (found on the included CD-ROM) to program the unit from a computer, see page 61.

Restarting the Unit

After changing the following parameters, the unit must be restarted in order for the new settings to take effect. (Data is not erased when the unit is restarted.)

- Operation Mode (page 48)
- IP Address Mode (page 52)
- IP Address (page 53)
- Subnet Mask (page 53)
- Default Gateway (page 53)
- SIP Ext. No. (page 53)
- SIP Password (page 54)
- SIP User Domain Name (page 54)
- SIP Proxy Server IP Address (page 54)
- SIP Registrar IP Address (page 54)
- Hold Method (page 54)
- SIP Signalling Port Number (page 55)
- VLAN ID (page 56)
- VLAN Priority (page 56)
- SIP ToS Field (page 56)
- RTP ToS Field (page 56)
- 1. Press [MENU].
- 2. Select "System Options", then press SELECT .
- 3. Select "Reboot", then press SELECT .
- 4. Select "Yes", then press SELECT .

<u>Note</u>

- To use Conferencing Phone Manager to restart the unit, see page 61.
- You can also restart the unit by turning it off and on again:
 - When using the AC adaptor: Disconnect the AC adaptor from the AC outlet, then connect it again.
 - When using PoE: Disconnect the LAN cable from the unit, then connect it again.

Parameter List

The following is a list of all programmable parameters. See the references listed here for information about each parameter.

Programming Category	Parameter	Reference
┌─ Show IP Address		page 48
- Operation Mode		page 48
— Basic Settings		page 49
	- Date & Time	page 50
	- Time Format	page 50
	- Ringer Volume	page 50
	- Ringtone	page 50
	- LCD Contrast	page 50
	- Key Tones	page 51
	- Call Waiting Tone Volume	page 51
	└─ Call Waiting	page 51
- Line Selection		page 51
- TEL Settings		page 51
	- Flash Time	page 52
	- Pause Time	page 52
	└─ TEL Line Level Reduction	page 52
- IP Network Settings		page 52
	- IP Address	page 53
	- Subnet Mask	page 53
	└─ Default Gateway	page 53
- Protocol Settings		page 53
	- SIP Password	page 54
	- SIP User Domain Name	page 54
	├─ SIP Proxy Server IP Address	page 54
	├─ SIP Registrar IP Address	page 54
	└─ Hold Method	page 54
Ļ		

Programming Category	Parameter	Reference
Î		
- VoIP Settings		page 55
	- RTP Packet Size	page 55
	├─ SIP Signalling Port Number	page 55
1	- RTP Port Number (Minimum)	page 55
1	└─ RTP Port Number (Maximum)	page 55
— QoS Settings		page 56
1	- VLAN Priority	page 56
1	- SIP ToS Field	page 56
1	└─ RTP ToS Field	page 56
- System Status Confirmation		page 57
	- IP Address	page 57
1	- Subnet Mask	page 57
1	- Default Gateway	page 57
	- DHCP Server	page 57
1	└─ MAC Address	page 57
└─ System Options	Erase All Call Log Data	page 57
	- Erase All Phonebook Data	page 57
	- Reset System Data	page 57
	- Reset All Data	page 58
	L Reboot	page 58

Parameters

When programming the unit from the front panel, the current setting is indicated on the display by "
<".

Show IP Address

Description	Available Settings	Default Setting
Allows you to confirm the unit's IP address. To change the IP address, see page 26.	_	192.168.0.2

Operation Mode

Description	Available Settings	Default Setting
 Determines the mode used to make and receive IP calls. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	☐ IP-PBX ☐ Peer to Peer	IP-PBX

Basic Settings

Language

Description	Available Settings	Default Setting
 Determines the display language. Use the following procedure to change the language. 1. Press [MENU]. 2. Press [^] 10 times. 3. Press [ENTER] two times. 4. Press [^] or [~] repeatedly to select the desired language. 5. Press [ENTER]. 6. Press [MENU]. 	Available languages vary by country or area. Deutsch English (UK) English (US) Français Français (C) Italiano Nederlands Português PYCCKИЙ УКРАЇНСЬКА	<pre>KX-NT700C: English (US) KX-NT700UK: English (UK) KX-NT700AL: English (UK) KX-NT700NZ: English (UK) KX-NT700RU: PYCCKИЙ KX-NT700BX: English (UK) KX-NT700NE: Varies by the selection made for the "Select Country" setting, which is available when the unit is turned on for the first time or after "Reset All Data" is used to reset the unit. German: "Deutsch" Italy: "Italiano" Netherlands: "Nederlands" Norway: "English (UK) " Portugal: "Português" Spain: "Español" Sweden: "English (UK) " Switzerland: "Deutsch" Austria: "Deutsch" Belgium: "Deutsch" Denmark: "English (UK) " Finland: "English (UK) " France: "Français" Others: "English (UK) "</pre>

Date & Time

Description	Available Settings	Default Setting
 The date and time are shown on the display in standby mode, and are displayed when playing conversations that were recorded to an SD memory card. Using the keypad, enter 2 digits each for the year, month, day of the month, hour (24-hour format), and minute. Example: To enter "Jan. 23, 2008, 7:45 PM", press [0801231945]. To correct a mistake, press needed, then enter the correct number. 	Year, month, day of the month, hour (24-hour format), minute	Jan. 1, 2008, 12:00 AM Date format is determined by the display language (see page 25). Deutsch: DD.MM.YYYY English(UK): DD/MM/YYYY English(US): MM/DD/YYYY Español: DD/MM/YYYY Français: DD/MM/YYYY Français(C): YYYY-MM-DD Italiano: DD/MM/YYYY Nederlands: DD-MM-YYYY Português: DD-MM-YYYY PYCCKIЙ: DD.MM.YYYY YKPAÏHCЬKA: DD.MM.YYYY

Time Format

Description	Available Settings	Default Setting
Determines the time format.	□ 12-hour □ 24-hour	12-hour

Ringer Volume

Description	Available Settings	Default Setting
Determines the ringer volume.	4 levels including "Off"	High

Ringtone

Description	Available Settings	Default Setting
Determines the ringtone.	<pre>Description Tone Pattern 1 Description Tone Pattern 2 Description Tone Pattern 3</pre>	Tone Pattern 1

LCD Contrast

Description	Available Settings	Default Setting
Determines the LCD contrast.	6 levels	Level 3

Key Tones

Description	Available Settings	Default Setting
Determines whether tones are heard when the unit's buttons are pressed.	□ On □ Off	On

Call Waiting Tone Volume

Description	Available Settings	Default Setting
Determines the volume of the call waiting tone heard when a second call is received.	☐ High □ Low	High

Call Waiting

Description	Available Settings	Default Setting
Determines whether a call can be received when you are already on another call.	<pre>Enable Disable</pre>	Enable

Line Selection

Description	Available Settings	Default Setting
Determines which lines can be used to make and receive calls.	□ IP + TEL □ IP + PC □ IP + PS	IP + TEL

TEL Settings

Dial Mode

Description	Available Settings	Default Setting
Determines the dial mode used for the TEL line.Set this parameter to match the specification of the TEL line.	<pre>Pulse Tone</pre>	Tone

Flash Time

Description	Available Settings	Default Setting
 Determines the flash time. Set this parameter to match the specification of the TEL line. 	<pre>900 ms 700 ms 600 ms 400 ms 300 ms 250 ms 200 ms 160 ms 110 ms 90 ms 80 ms</pre>	<pre>KX-NT700C: 700 ms KX-NT700UK: 110 ms KX-NT700AL: 110 ms KX-NT700AL: 110 ms KX-NT700NZ: 600 ms KX-NT700RU: 700 ms KX-NT700BX: 700 ms KX-NT700BE: Varies by the selection made for the "Select Country" setting, which is available when the unit is turned on for the first time or after "Reset All Data" is used to reset the unit. France: "250 ms" All other: "110 ms"</pre>

Pause Time

Description	Available Settings	Default Setting
Determines the length of the dialling pause inserted when [REDIAL/PAUSE/ \bigcirc / \odot] is pressed.	□ 3 s □ 5 s	3 s

TEL Line Level Reduction

Description	Available Settings	Default Setting
 Determines whether the incoming TEL line signal level is reduced. Set this feature to "on" if the volume of your voice heard from the speaker is too loud. When set to "on", the other party's voice will be slightly quieter. We recommend setting this feature to "on" when establishing conference calls that use the TEL line. 	□ On □ Off	Off

IP Network Settings

Consult your system administrator for the appropriate settings.

IP Address Mode

Description	Available Settings	Default Setting
 Determines whether the unit's IP address is assigned automatically (DHCP) or manually (static). If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	□ DHCP □ Static	Static

IP Address

Description	Available Settings	Default Setting
 Determines the unit's IP address. This parameter is only available when "IP Address Mode" is set to "Static". If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	—	192.168.0.2

Subnet Mask

Description	Available Settings	Default Setting
 Set this parameter to match the IP address of the IP network's subnet mask. This parameter is only available when "IP Address Mode" is set to "Static". If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	_	255.255.255.0

Default Gateway

Description	Available Settings	Default Setting
 Set this parameter to match the IP address of the IP network's default gateway. This parameter is only available when "IP Address Mode" is set to "Static". If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 		0.0.0.0

Protocol Settings

Consult your system administrator for the appropriate settings.

SIP Ext. No.

Description	Available Settings	Default Setting
 Set this parameter to match the extension number assigned to the unit through PBX programming. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	Max. 32 digits	_

SIP Password

Description	Available Settings	Default Setting
 Set this parameter to match the password assigned to the unit through PBX programming. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	Max. 32 characters	_

SIP User Domain Name

Description	Available Settings	Default Setting
 Set this parameter to match the IP address of the IP-PBX. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	_	_

SIP Proxy Server IP Address

Description	Available Settings	Default Setting
 Set this parameter to match the IP address of the IP-PBX. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	—	0.0.0.0

SIP Registrar IP Address

Description	Available Settings	Default Setting
 Set this parameter to match the IP address of the IP-PBX. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	—	0.0.0.0

Hold Method

Description	Available Settings	Default Setting
 Determines the hold protocol used for the IP line. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	□ RFC2543 □ RFC3264	RFC3264

VoIP Settings

Preferred CODEC

Description	Available Settings	Default Setting
Determines the preferred codec for IP calls.	□ G.722 □ G.711µ-law □ G.711A-law □ G.729a	G.722

RTP Packet Size

Description	Available Settings	Default Setting
Determines the size of outgoing RTP packets.	 20 ms 30 ms 40 ms 50 ms 60 ms 	20 ms

SIP Signalling Port Number

Description	Available Settings	Default Setting
 Determines the port number used for SIP signalling. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	5060-5070	5060

RTP Port Number (Minimum)

Description	Available Settings	Default Setting
 Determines the lowest port number used for RTP. Set this parameter to a value lesser than the setting for "RTP Port Number (Maximum)". 	51000–51998 (even values only)	51000

RTP Port Number (Maximum)

Description	Available Settings	Default Setting
 Determines the highest port number used for RTP. Set this parameter to a value greater than the setting for "RTP Port Number (Minimum)". 	51002–52000 (even values only)	52000

QoS Settings

VLAN ID

Description	Available Settings	Default Setting
 Determines the VLAN ID. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	0001-4095	4095

VLAN Priority

Description	Available Settings	Default Setting
 Determines the VLAN priority. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	0-7	0

SIP ToS Field

Description	Available Settings	Default Setting
 Determines the value of the SIP ToS Field. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	8-bit binary code	0000000

RTP ToS Field

Description	Available Settings	Default Setting
 Determines the value of the RTP ToS Field. If this setting is changed, the unit must be restarted before the new setting becomes effective (see page 45). 	8-bit binary code	0000000

System Status Confirmation

Description

The settings for the following parameters can be displayed for confirmation.

- Software Version
- IP Address
- Subnet Mask
- Default Gateway
- DHCP Server
- MAC Address

System Options

Erase All Call Log Data

Description

Allows you to erases all entries in the redial list.

Erase All Phonebook Data

Description

Allows you to erase all entries in the phonebook.

Reset System Data

Description

Allows you to reset all system data (i.e., the parameters described in this section) to the factory default settings. • After executing this feature, the unit will restart automatically.

- The following data and settings are not erased when this feature is executed.
- "Date & Time" setting (note that the "Time Format" setting is reset)
 - Phonebook entries
 - Redial list

•

– SD memory card recordings

Reset All Data

Description

Allows you to reset all system data (i.e., the parameters described in this section), user data, and all settings. The unit is returned to its factory default state when this feature is executed.

- After executing this feature, the unit will restart automatically.
 - The following data and settings are not erased when this feature is executed.
 - SD memory card recordings
- The following data and settings are erased when this feature is executed.
 - "Date & Time" setting
 - Phonebook entries
 - Redial list

Reboot

•

Description

Allows you to restart the unit.

No data is erased when this feature is executed.

Erasing Data

The following features allow you to erase system data and user data stored in the unit.

Erase All Call Log Data

Allows you to erases all entries in the redial list.

Erase All Phonebook Data

Allows you to erase all entries in the phonebook.

Reset System Data

Allows you to reset all system data to the factory default settings.

- The following data and settings *are not erased* when this feature is executed.
 - "Date & Time" setting (note that the "Time Format" setting is reset)
 - Phonebook entries
 - Redial list
 - SD memory card recordings

Reset All Data

Allows you to reset all system data, user data, and all settings. The unit is returned to its factory default state when this feature is executed.

- The following data and settings *are not erased* when this feature is executed.
 - SD memory card recordings
- The following data and settings are erased when this feature is executed.
 - "Date & Time" setting
 - Phonebook entries
 - Redial list

<u>Note</u>

 These features do not erase the contents of the SD memory card. To erase the SD memory card, see page 42.

Erasing the Redial List

- 1. Press [MENU].
- 2. Select "System Options", then press SELECT .
- 3. Select "Erase All Call Log Data", then press SELECT .
- 4. Select "Yes", then press SELECT .
- 5. Press [MENU].

Erasing the Phonebook

1. Press [MENU].

- 2. Select "System Options", then press SELECT .
- 3. Select "Erase All Phonebook Data", then press SELECT.
- 4. Select "Yes", then press SELECT .
- 5. Press [MENU].

Resetting System Data

- 1. Press [MENU].
- 2. Select "System Options", then press SELECT .
- 3. Select "Reset System Data", then press SELECT .
- 4. Select "Yes", then press SELECT .
 - The unit will restart automatically.

Resetting All Data

Notice

- The unit is returned to its factory default state when this feature is executed. All user data (except for the contents of the SD memory card) will be erased.
- 1. Press [MENU].
- 2. Select "System Options", then press SELECT .
- 3. Select "Reset All Data", then press SELECT .
- 4. Select "Yes", then press SELECT .
 - The unit will restart automatically.
 - If "Select Country" is displayed after the unit restarts, press [^] or [~] repeatedly to select the country of use, then press SAVE.

Using Conferencing Phone Manager

The unit can be used in conjunction with Conferencing Phone Manager. This software can be found on the included CD-ROM, and allows you to operate and program the unit using a computer. For software installation instructions, see page 31.

Connecting a Computer

Connect the included USB cable to the USB port of the unit (1) and of the computer.



<u>Note</u>

 We recommend using only the included USB cable when connecting the unit to a computer via USB.

Starting Conferencing Phone Manager

You can start Conferencing Phone Manager using any of the following methods.

 Using the shortcut icon
 Double-click the Conferencing Phone Manager shortcut icon on the desktop (created during software installation).



From the [Start] menu
 Click [Start]→[All
 Programs]→[Panasonic]→[Conferencing
 Phone Manager]→[Conferencing Phone
 Manager].

After Conferencing Phone Manager starts, the front panel screen is displayed.



<u>Note</u>

• Software appearance varies by country or area (see page 18).

Exiting Conferencing Phone Manager

To exit, click the icon (\mathbf{X}) in the upper-right corner of the front panel screen.

Operating the Unit Using Conferencing Phone Manager

From the front panel screen, you can operate the unit just as if you were using the front panel of the unit itself. For information about using the following commonly used features, refer to pages listed below.

- Making calls (page 33)
- Answering calls (page 36)
- Adding entries to the phonebook (page 38) For information about other features, refer to the relevant sections in this document.

Programming the Unit Using Conferencing Phone Manager

- 1. Start Conferencing Phone Manager (see page 60).
- 2. Click the icon (1) in the upper-left corner of the front panel screen.
 - The programming screen is displayed.



- **3.** Click the desired programming category name on the left side of the screen.
 - The corresponding parameters are displayed on the right side of the screen.

System Status Confirmation	Basic Settings				
Basic Settings Line Selection TEL Settings	Language Language:	English (U	0		Y
Signalling Protocol Settings VoIP Settings Social Settings Social Contract	Date & Time Date: Time:	23/01/200 07:45	•		
Restart	Time Format	12-hour	O24-hour		
	Ringer Ringer Volume:	OH	Low	Medium	High
	Ringtone:	Tone Patte	m 1		*
	LCD Contrast				
	Level 1		Ŷ		Level 6
	Tone Key Tones:		⊙ 0n	Off	
	Call Waiting Ton	e Volume:	OLow	 High 	
	Call Waiting				
	Gall Waiting		 Enable 	Oisable	

- 4. Change the parameters as desired.
- 5. Click [OK].
 - The front panel screen is displayed again.
 - To cancel without changing any settings, click [Cancel].

<u>Note</u>

 If the unit must be restarted before the new settings become effective, a dialogue will prompt you to restart the unit. Click [Yes] to restart the unit.

Restarting the Unit Using Conferencing Phone Manager

- 1. Click the icon (🔄) in the upper-left corner of the front panel screen.
 - The programming screen is displayed.
- 2. Click [Restart].
- **3.** Click **[Restart]**, then click **[Yes]**.
 - The front panel screen is displayed again.

Troubleshooting

If you are experiencing trouble, refer to the information in this section. Before troubleshooting, confirm all connections (see page 23) and confirm that the AC outlet or PoE device to which the unit is connected to is receiving power.

General Use

Issue	Possible Cause & Solution	Reference
The display is blank.	 The unit is not receiving power. → The unit is not designed to function when there is a power failure. Make sure that the unit is connected to the AC outlet and receiving power. If using PoE, confirm that the device supplying PoE is receiving power and that the LAN cable is properly connected. 	page 23
The unit is not performing properly.	 Cables or cords are not connected properly. → Check all connections. 	page 23
	 An error has occurred. → Reset the unit. Disconnect the unit from the AC outlet, wait 10 seconds, then connect the AC adaptor again. If using PoE, disconnect the LAN cable, wait 10 seconds, then connect the LAN cable again. 	page 23

Making and Receiving Calls

Issue	Possible Cause & Solution	Reference
I cannot make IP calls.	 The IP line is not selected. → Before dialling, confirm that "IP" is shown in the upper-right corner of the display. Press the centre function button ([F2]) to change the line if necessary. 	page 32
	 The IP address was entered incorrectly. → Confirm that you have entered the IP address of the other party correctly. 	page 33
	 The "Operation Mode" setting is not correct. → Change the setting to "Peer to Peer" if you want to make or receive peer to peer IP calls (i.e., calls made by specifying the called party's IP address). → Change the setting to "IP-PBX" if you want to make or receive intercom and outside calls as a SIP extension of the connected PBX. 	page 27
	Consult your system administrator.	—

Issue	Possible Cause & Solution	Reference
I cannot make TEL calls.	 The TEL line is not selected. → Before dialling, confirm that "TEL" is shown in the upper-right corner of the display. Press the centre function button ([F2]) to change the line if necessary. 	page 32
	 The unit is not set to make TEL calls. → Make sure the "Line Selection" setting is set to "IP + TEL". 	page 25
	 The dial mode setting is incorrect. → Make sure that the dial mode matches the type of telephone service you have (i.e., tone or pulse). 	page 25
I cannot receive IP calls.	 The "Operation Mode" setting is not correct. → Change the setting to "Peer to Peer" if you want to make or receive peer to peer IP calls (i.e., calls made by specifying the called party's IP address). → Change the setting to "IP-PBX" if you want to make or receive intercom and outside calls as a SIP extension of the connected PBX. 	page 27
I cannot receive TEL calls.	 The unit is not set to receive TEL calls. → Make sure the "Line Selection" setting is set to "IP + TEL". 	page 25
I cannot use the unit for PS or PC calls.	 The Portable Station (PS) or computer is not connected correctly. → Confirm you are using the correct cable to connect to the device, and that the cable is connected properly. 	page 43 page 44
	 The PS or PC line is not selected. → Confirm that "PS" or "PC" is shown in the upper-right corner of the display. Press the centre function button ([F2]) to change the line if necessary. → Make sure the "Line Selection" setting is set to "IP + PS" (for PS calls) or "IP + PC" (for PC calls). 	page 43 page 44
	 The PS or computer is not able to make or receive calls. → Disconnect the audio cable from the device and confirm that the device is able to make or receive calls. If the device cannot make calls, you cannot use the unit for PS or PC calls. Refer to the operating instructions for the device. 	_

Troubleshooting

Issue	Possible Cause & Solution	Reference
I cannot redial by pressing [REDIAL/PAUSE/◯● / ⊕].	 The number you are trying to redial is too long. → If the dialled number contains too many digits (more than 32 digits for IP calls with IP-PBX connection, more than 128 digits for TEL calls), it cannot be redialled correctly. 	_
	 You pressed [REDIAL/PAUSE/ → / →] after you began dialling. → If you press [REDIAL/PAUSE/ → / →] after you begin dialling a phone number, the button functions as the pause button. To redial the last number dialled, press [n +] then [REDIAL/PAUSE/ → / →]. To redial one of the last 10 phone numbers dialled, press [REDIAL/PAUSE/ → / →], press [^] or [~] to select the desired phone number, then press [n +]. 	page 34
	 You are trying to redial a TEL line call, but the unit is not set to make TEL calls. → Make sure the "Line Selection" setting is set to "IP + TEL". 	page 25
	 The "Operation Mode" setting is not the same as when the original call was made. (For example, you are trying to redial an IP call made in IP-PBX mode, but the unit is now in peer to peer mode.) → Change the setting. 	page 27
I cannot make long distance calls.	 Your telephone service does not allow you to make long distance calls. → Make sure that you have subscribed to your telephone company's long distance service. 	_
	 If the unit is connected to a PBX, your extension may not be configured to make long distance phone calls. → Contact the PBX administrator. 	_
The unit does not ring when a call is received.	 The ringer is turned off. → Press [∧] while a call is being received, or change the ringer volume setting. 	page 36

Sound Quality

Issue	Possible Cause & Solution	Reference
The other party cannot hear my voice.	 The unit is muted. → If "Mute" is displayed, press [✓/C] to turn off the mute feature. 	page 37
	 Objects are obstructing the microphone. → Do not obstruct the unit or an External Wired MIC during calls. Keep your hands, as well as common objects such as folders, cups, and coffee pots away from the unit and the External Wired MIC during calls. 	—

Issue	Possible Cause & Solution	Reference
Sound cuts out; I can hear myself through the speaker.	 The unit has not yet adapted to the environment for the current call. → Speak in turns with the other party at the beginning of a conversation. This allows the unit to adapt to its environment so that both parties can speak effectively. 	_
	 If using a PS, you are pressing [rd] before the PS call has started. → Start the call using the PS, then press [rd]. 	page 43
	 If using a PS, the PS Cable is not firmly connected to the PS. → Make sure the plug of the PS Cable is inserted fully into the PS, otherwise echoing and feedback may occur. 	page 43
	 If using DSL service, a device connected between the unit and the telephone jack is causing interference. → Connect the unit directly to the telephone jack if possible, and/or consult your DSL service provider. 	_
	 You are too far away from the microphone. → Try speaking closer to the microphone. 	page 30
	 The environment is not suited to speakerphone calls. → Do not use the unit within 2 m of projectors, air conditioning devices, fans, or other audible or electrical noise emitting devices. → If using the unit in a room with windows, close the curtains or blinds to prevent echoes. → Use the unit in a quiet environment. 	_
	 The unit or an External Wired MIC was moved during a call. → Do not move the unit or an External Wired MIC while on a call. 	_
	 Objects are obstructing the microphone. → Do not obstruct the unit or an External Wired MIC during calls. Keep your hands, as well as common objects such as folders, cups, and coffee pots away from the unit and the External Wired MIC during calls. 	_
	 The other party is using a half-duplex speakerphone. → If the other party is using a half-duplex speakerphone, sound may cut out occasionally during calls. For best performance, the other party should use a full-duplex speakerphone. 	_

SD Memory Cards

Issue	Possible Cause & Solution	Reference
I cannot record to the SD memory card.	 The SD memory card is not compatible with the unit. → Make sure that you are using a compatible SD memory card. (SDHC, miniSDHC, and microSDHC memory cards are not compatible with the unit.) 	page 28
	 The SD memory card is not formatted or was not formatted properly. → Format SD memory cards for use with this unit in FAT format (FAT16) using a computer. 	page 29
	 The SD memory card was not inserted properly. → Make sure that the SD memory card is inserted properly by gently pushing it securely but gently toward the back of the SD memory card slot. 	page 28

Phonebook

Issue	Possible Cause & Solution	Reference
I cannot add or edit entries to the phonebook.	 You are on a call or playing back recordings. → You cannot add or edit phonebook entries while on a call or while playing back recordings. 	_
	 The "Operation Mode" setting is not correct. → Change the setting to "Peer to Peer" if you want to add or edit peer to peer IP call entries (i.e., entries stored by specifying the called party's IP address). → Change the setting to "IP-PBX" if you want to add or edit IP call entries that will be called when using the unit as a SIP extension of the connected PBX. 	page 27
	 A call is being received. → The unit exits the phonebook automatically when a call is received. Add or edit the phonebook entry again once you have finished the call. 	_
	 There are 100 entries in the phonebook. → The phonebook is full. Erase any unnecessary entries. 	page 39

Issue	Possible Cause & Solution	Reference
I cannot call entries in the phonebook.	 You are trying to make a TEL line call, but the unit is not set to make TEL calls. → Make sure the "Line Selection" setting is set to "IP + TEL". 	page 25
	 You are trying to make an IP line call, but the "Operation Mode" setting is not correct. → Change the setting to "Peer to Peer" if you want to make or receive peer to peer IP calls (i.e., calls made by specifying the called party's IP address). → Change the setting to "IP-PBX" if you want to make or receive intercom and outside calls as a SIP extension of the connected PBX. 	ng to make an IP line call, but the "Operation g is not correct. the setting to "Peer to Peer" if you want to make we peer to peer IP calls (i.e., calls made by ng the called party's IP address). the setting to "IP-PBX" if you want to make or ntercom and outside calls as a SIP extension of the ed PBX.
The unit returns to standby mode while adding or editing phonebook entries.	 1 minute has passed since you pressed a button. → If you pause for over 1 minute while adding or editing phonebook entries, the unit returns to standby mode. 	_

Programming

Issue	Possible Cause & Solution	Reference
The unit returns to standby mode while programming the unit.	 1 minute has passed since you pressed a button. → If you pause for over 1 minute while programming the unit, the unit returns to standby mode. 	—
I cannot program the unit.	 You are on a call. → Program the unit once you have finished the call. 	—
	 A call is being received. → The unit exits programming mode automatically when a call is received. Program the unit again once you have finished the call. 	—
After I changed the settings, the changes do not take effect.	 The unit must be restarted before the new setting becomes effective. → Restart the unit. 	page 45

Display Messages

Message	Possible Cause & Solution	Reference
Busy	 The called party is busy (displayed for IP calls only). → Try again later. 	_
Reject Call	• The called party rejected your call (displayed for IP calls only). \rightarrow Try again later.	_

Troubleshooting

Message	Possible Cause & Solution	Reference
Not Found	 The called party cannot be connected (displayed for IP calls only). → Confirm that you have entered the IP address of the other party correctly. → Try again later. 	_
Phonebook No Items Stored	 The phonebook contains no entries. → You must store entries in the phonebook before you can make a call from the phonebook. 	page 38
Phonebook Error	 An error has occurred. → Press [BACK], then erase all phonebook entries using the "Erase All Phonebook Data" feature. 	page 59
Call Log Error	 An error has occurred. → Press [BACK], then erase the redial list using the "Erase All Call Log Data" feature. 	page 59
Please Wait	 An SD memory card was inserted. → Wait while the unit checks the card. 	_
Format Error	 An error occurred while formatting the SD memory card. → Remove the SD memory card and use a different card. 	—
Unable To Use	 The SD memory card is not compatible with the unit. → Make sure that you are using a compatible SD memory card. → SDHC, miniSDHC, and microSDHC memory cards are not compatible with the unit. 	page 28
	 The SD memory card is not formatted in FAT format. → Use a FAT format SD memory card. 	page 29
	 The selected recording is less than 1 second long. → Recordings less than 1 second long cannot be played back. 	—
Memory Full	 The SD memory card cannot be used for recording because it is full. → Erase unneeded recordings. 	page 42
Write Protected	 The switch on the side of the SD memory card is in the "LOCK" position. → Remove the card, slide the switch to unlock the card, then insert the card again. 	page 28
System Data Err Clear Data?	 An error has occurred. → Press YES to reset all system data and restart the unit. Press NO to restart the unit without resetting any data. 	_
No Connection To Analogue Line	 You tried to make a call immediately after refusing a call. → Wait until "TEL" is shown on the display, then make the call. 	_
No Connection To SIP Server	 The unit's network settings and/or SIP settings are incorrect. → Consult your system administrator. 	

Troubleshooting

Message	Possible Cause & Solution	Reference
No Connection To IP Network	 The LAN cable is not connected. → Check all connections. 	page 23
	 The unit cannot receive IP settings from the DHCP server. → Consult your system administrator. 	_

Other Information

Cleaning the Unit

Clean the unit periodically with a soft, dry cloth.



Keep the following in mind when cleaning the unit.

- To avoid damaging the unit, disconnect the AC adaptor cord and all cables from the unit before cleaning.
- If the unit becomes particularly dirty, apply a light kitchen cleanser to a soft cloth, wring the cloth thoroughly, and wipe the unit. When finished, dry the unit with a soft, dry cloth.
- To avoid damage or discolouration, do not clean the unit with the following materials, or with cleaners containing the following materials.
 - Petroleum
 - Scouring powder
 - Alcohol
 - Paint thinner
 - Benzine
 - Wax
 - Hot water
 - Powdered soap
- When using chemical cleansers, follow the instructions on the label carefully.

Specifications

Item	Specification
Communication Lines	4 (IP, TEL, PS, PC) IP: Communication via IP network, available in peer to peer mode and IP-PBX mode TEL: Communication via telephone line PS: Communication via audio connection to a compatible Portable Station PC: Communication via audio connection to a computer
Maximum No. of Parties	 Main unit user + 2 IP calls (Peer to peer mode only) Main unit user + 1 IP call + 1 TEL call Main unit user + 1 IP call + 1 PS call Main unit user + 1 IP call + 1 PC call
VoIP Connection Method	SIP
VoIP Audio Codec	G.722 (Peer to peer mode only), G.711 (µ-law/A-law), G.729a
LAN Interface	IEEE802.3/IEEE802.3u (10/100Base-TX) Straight/cross automatic crossover (Auto MDI/MDX)
IP Address Mode	Automatic (DHCP), manual (static)
Dial Mode	Tone, pulse
Speaker	1 (Output: 85 dB; Frequency range: 300 Hz–7000 Hz)
Built-in Microphone	4 locations, 8 total (Sensitivity area: about 3 m)
IP Network Interface Jack (LAN)	1 (RJ45)
Telephone Interface Jack (LINE)	1 (RJ11)
USB Port	1 (USB 2.0, Full speed)
SD Memory Card Slot	1 (32 MB–2 GB)
Audio Interface Jack (AUDIO IN/OUT)	1 (ø 3.5 mm, monaural)
External Wired MIC Jack (EXT MIC1, EXT MIC2)	2 (Modular jack)
Main Unit Dimensions	About 55 mm (H) \times 275 mm (W) \times 275 mm (D)
Main Unit Mass	About 1300 g
AC Adaptor	PQLV206 Input: AC 120 V, 60 Hz Output: DC 9 V 750 mA PQLV206AL Input: AC 220 V–240 V, 50 Hz/60 Hz Output: DC 9 V 750 mA PQLV216 Input: AC 100 V–240 V, 50 Hz/60 Hz Output: DC 9 V 750 mA

Specifications

Item	Specification
PoE Interface	Compliant with IEEE802.3af
Power Consumption	Standby mode: about 4.8 W Talk mode: about 6.5 W
Operating Environment	Temperature: 0 °C–40 °C Humidity: Less than 90% (with no condensation) Ambient noise: Less than 50 dBA (recommended)
Index

Α

AC Adaptor 16, 23 AC Cord 16, 23 Accessories 16 Answering Calls 36 AUDIO IN/OUT Jack 17

В

BACK Button 19 Built-in Microphones 17, 30 Buttons 18

С

Call Waiting 19, 36, 51 Call Waiting Tone Volume 51 Characters 40 Cleaning 70 Computer 44 Conference Calls 34, 36 Conferencing Phone Manager Connecting a Computer 60 Install 31 Operating the Unit 60 Programming the Unit 61 Restart 61 Starting 60 Uninstall 31 Connections 23

D

Date & Time 25, 50 Default Gateway 53 Dial Mode 51 Dialling Pause 34 Display 19, 20 Display Messages 67

Ε

ENTER Button 19 Erase All Call Log Data 57 Erase All Phonebook Data 57 Erasing Data 59 Error Messages 67 External Wired MIC 16, 30 External Wired MIC Jacks (EXT MIC1, EXT MIC2) 17

F

Feature List 46 FLASH Button 19, 37 Flash Time 52 Format 29 Function Buttons ([F1], [F2], [F3]) 20

Н

Hold Method 54

I

Indicators 17 Initialise 59 IP Address 53 IP Address Mode 52 IP Network Settings 26 IP-PBX Mode 27

Κ

Key Tones 51

L

LAN Cable 23 LAN Port 17 Language 49 LCD Contrast 50 Line Icon (IP, TEL, PS, PC) 20 Line Selection 32, 51

Μ

Making Calls 33 MENU Button 19 MIC NOISE CUT Button 19 Microphones 30 Mute 37 Mute/Clear Button 19

Ν

Navigator/Volume Buttons 19 Noise Reduction 37

0

Operation Mode 27, 48

Ρ

Parameter List 46 Pause Time 52 PC Cable 16 Peer to Peer Mode 27 Phonebook 34, 38 Playback 41 Playback Control Buttons 19 Portable Station (PS) 43 Preferred CODEC 55 Programming 45, 61 PS Cable 16

R

Reboot 58 Recording 41 Recording Time 28 Redial 34 REDIAL/PAUSE Button 19

Index

Reset 59 Reset All Data 58 Reset System Data 57 Restart 45, 61 Ringer Volume 36, 50 Ringtone 50 RTP Packet Size 55 RTP Port Number (Maximum) 55 RTP Port Number (Minimum) 55 RTP ToS Field 56

S

SD Icon 20 SD Memory Card 28 SD Memory Card Slot 17 Security 10 Settings 45 Show IP Address 48 SIP Ext. No. 53 SIP Password 54 SIP Proxy Server IP Address 54 SIP Registrar IP Address 54 SIP Settings 27 SIP Signalling Port Number 55 SIP ToS Field 56 SIP User Domain Name 54 Speaker 17 Speaker Volume 33, 36 Speakerphone Button 19 Specifications 71 Speech Speed 37 Subnet Mask 53 System Status Confirmation 57

Т

TEL Cord 23 TEL Line Level Reduction 52 Telephone Line Jack (LINE) 17 Time Format 50 Troubleshooting 62

U

USB Cable 16 USB Icon 20 USB Port 17

V

VLAN ID 56 VLAN Priority 56 Voice Memo 41

Notes

The KX-NT700UK and KX-KT700NE are designed to interwork with the: • Analogue Public Switched Telephone Network (PSTN) of European countries

Panasonic Communications Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC. Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

http://www.doc.panasonic.de

Contact to Authorised Representative: Panasonic Testing Centre Panasonic Marketing Europe GmbH Winsbergring 15, 22525 Hamburg, Germany

Panasonic Communications Co., Ltd. 1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© Panasonic Communications Co., Ltd. 2008