

Panasonic

Integrated Telephone System

Operating Instructions

Model No. **KX-TS600FX**

Pulse-or-tone dialling capability



KX-TS600FXW

This unit is compatible with Caller ID. To use this feature, you must subscribe to the appropriate service offered by your service provider.

Please read these Operating Instructions before using the unit and save for future reference.

Preparation

Basic Operation

Advanced Operation

Useful Information

Before Initial Use

Thank you for purchasing your new Panasonic integrated telephone.

For your future reference

Serial No. _____ Date of purchase _____
(found on the bottom of the unit)

Name and address of dealer _____

Note:

- In the event of problems, you should contact your equipment supplier in the first instance.

Declaration of Conformity:


- Panasonic Communication Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC. Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:
<http://www.doc.panasonic.de>

Contact:

Panasonic Services Europe
a Division of Panasonic Marketing Europe GmbH
Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany


Accessories (included)

☐ Handset (p. 6)

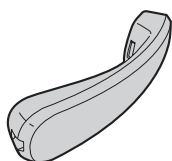

one

☐ Handset Cord (p. 6)

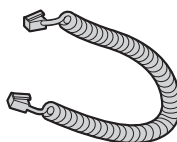

one

☐ Telephone Line Cord (p. 6)



one

Contents

<i>Preparation</i>	<i>Advanced Operation</i>
Location of Controls 4	Phonebook 26
Display 5	Storing Names and Phone Numbers in Phonebook 26
Settings 6	Dialling from the Phonebook . . . 28
Installing the Batteries 6	Chain Dial 29
Connecting the Handset/ Telephone Line Cord 6	Editing 30
Connecting a Communication Device 7	Erasing 31
Programming Summary 8	Direct Dial (M1, M2, M3) 32
Time and Date 9	Storing Names and Phone Numbers in Memory 32
Display Language 11	Dialling 34
Dialling Mode 12	Special Features 35
LCD Contrast 13	Temporary Tone Dialling (For Rotary or Pulse Service Users) 35
Ringer Volume 13	How to Use the PAUSE Button (For PBX Line/Long Distance Calls) 35
Time Adjustment (Caller ID subscribers only) . . 14	For Call Waiting Service Users 35
	Muting Your Conversation . . . 36
	Setting Hold Music to ON/OFF 36
	FLASH Button 37
	Setting the Password 38
	Dial Lock 39
	Call Restriction 40
<i>Basic Operation</i>	<i>Useful Information</i>
Making Calls 15	Optional Headset 42
Answering Calls 17	Wall Mounting 43
Caller ID Service 18	Battery Replacement 44
Private Name Display 18	Troubleshooting 45
Using the Caller List 19	Safety Instructions 47
Viewing the Caller List 19	Specifications Back Cover
Calling Back from the Caller List 20	
Editing the Caller's Phone Number 21	
Storing Caller List Information in the Phonebook 22	
Storing Caller List Information in the Direct Dial Memory 23	
Erasing Caller List Information 25	


Preparation

Basic Operation

Advanced Operation


Useful Information

Location of Controls

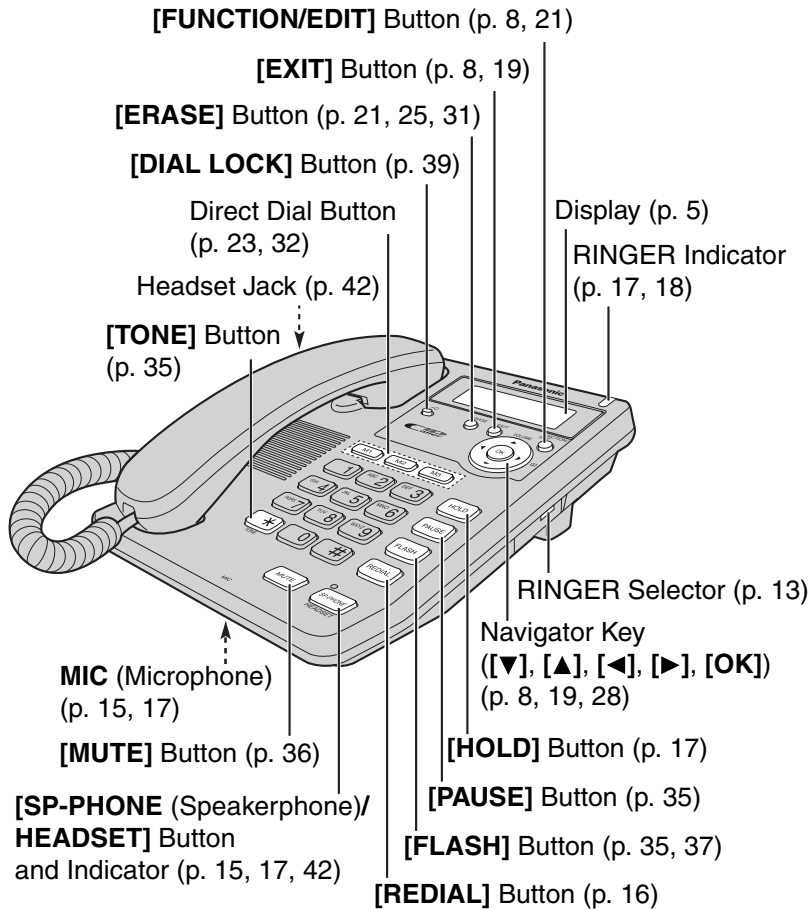

How to use the Navigator key and [OK] button


This key has five active areas that are indicated by arrows and [OK].

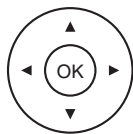


- Pressing the up and down arrows allows you to enter the Caller List and scroll through the function menu.
- Pressing the right and left arrows allows you to enter the Phonebook and move the cursor when entering items. The right arrow is also used to select the desired item.
- The [OK] button is used to select and confirm desired item.

Throughout these Operating Instructions, the navigator key is indicated by the arrows [▼], [▲], [◀] or [▶] and [OK].


Display

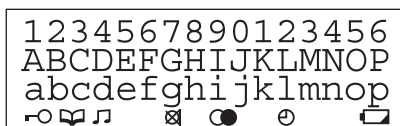

 
(This display shows all of the possible configurations.)



 
While the unit is not in use, the display shows the current time and date, and the number of missed calls.



 If the display continuously shows "0:00 31.12" or "12:00AM 31.12" and "⊗" flashes, the clock needs adjustment (p. 9, 10).



 During a conversation, the display shows the length of the call (Example: 1 hour, 6 minutes and 35 seconds).




This is a display from the Caller List. The display shows:

- the caller's number,
- the time and date of the call
(Example: Nov. 24, 11:50 AM).

- ⊗ :The dial lock mode is set. To cancel the mode, see page 39.
- 📖 :The unit enters in the Phonebook.
- 🎵 :The unit plays music during the hold for a caller.
- 🔇 :[MUTE] was pressed during a conversation (p. 36).
- 📞 :[REDIAL] was pressed while the handset is on the cradle and SP-PHONE/HEADSET indicator is off (p. 16).
- 🔋 :This display flashes, when the battery power is low. To replace the batteries, see page 44.
- P :[PAUSE] was pressed while dialling or storing phone numbers.
- F :[FLASH] was pressed while storing phone numbers.

Settings

Installing the Batteries

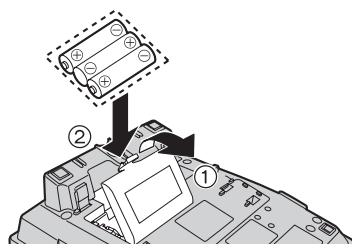


- 1 Press down in the direction of the arrow and open the cover (①).
- 2 Install the batteries in the proper order as shown (②), matching the correct polarity.
- 3 Close the battery cover.

- Batteries are not included with the unit.
- Install three high quality “AA” size Alkaline (LR6) or Manganese (R6, UM-3) batteries. We recommend to use Panasonic batteries.
 Battery life : —about six months when using Alkaline batteries.
 —about three months when using Manganese batteries.
 Battery life may depend on usage conditions and ambient temperature.
- Make sure batteries were inserted properly inphase to ensure the functionality of this unit.
- Please refer to page 44 for battery replacement and precautions.

THE UNIT MAY NOT WORK PROPERLY WITHOUT BATTERIES.

Connecting the Handset/Telephone Line Cord


After line connection, lift the handset to check for a dial tone.

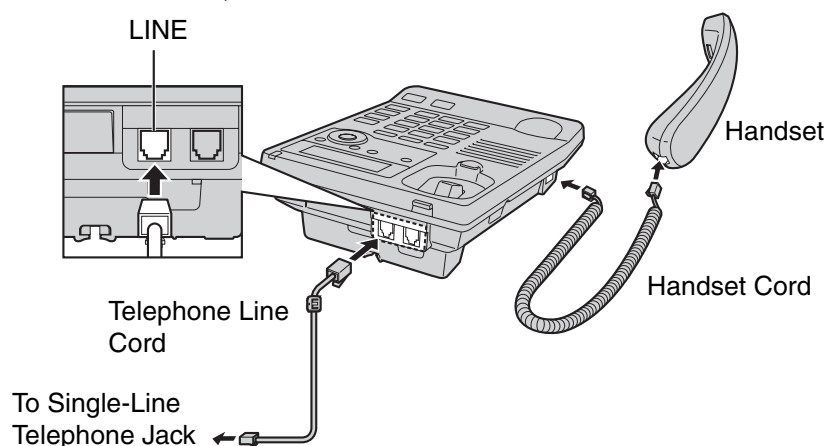

- Use only a Panasonic Handset for the KX-TS600FXW and KX-TS600FXB.
- Use only the telephone line cord included with the unit.
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.

If you subscribe to a DSL service


- Please attach a noise filter (contact your DSL provider) to the telephone line between the base unit and the telephone line jack in the event of the following:
 - Noise is heard during conversations.
 - Caller ID feature (p. 18) does not function properly.

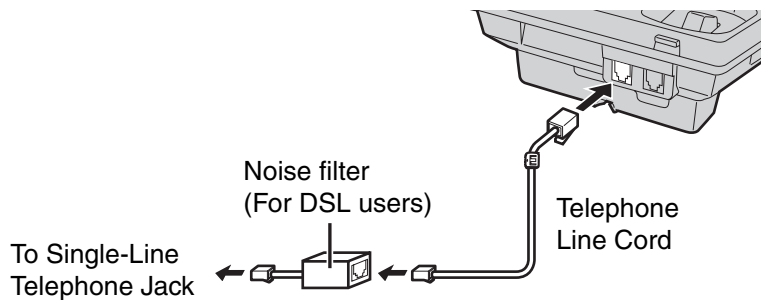

Connecting a Communication Device

If you want to connect a communication device (computer, modem, fax, answering machine, etc.) to the telephone line, you can connect it through this unit using the DATA jack.

After connecting the handset and telephone line cord (p. 6), connect the communication device telephone line cord to the DATA jack.

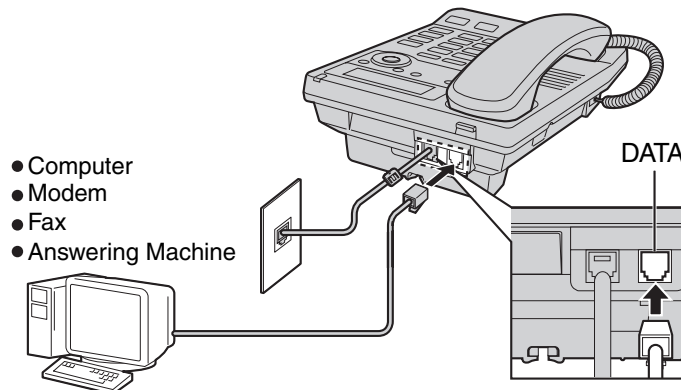

- Make sure the communication device is not in use before using this unit (making calls, storing phone numbers in memory etc.) or the communication device may not operate properly.

➔ Settings

Programming Summary

You can program the following functions. The display shows the programming instructions. See the corresponding pages for function details.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

Press [FUNCTION/EDIT].

<Function menu>*

Save phonebook ?	To store names and phone numbers in
Save M1,M2,M3 ?	memory (p. 26, 32).
Program ?	
Set clock ?	To set the time and date (p. 9).
Change language?	To select the display language (p. 11).

Scroll to "Program ?" by pressing [▼] or [▲], and press [OK] (Yes key).

<Function menu>*

Change password?	To change the password for the dial lock
	and call restriction (p. 38).
Call restrict ?	To set the call restriction (p. 40).
Set flash time ?	To select the flash time (p. 37).
Set dial mode ?	To select the dialling mode (p. 12).
LCD contrast ?	To select the LCD contrast (p. 13).
Set hold music ?	To set the music during hold (p. 36).
Time adjustment?	To set the auto time adjustment (p. 14).

During programming

* To select a desired function item, scroll through the items by pressing [▼] or [▲]. Then press [OK] to go to the next step.

The right arrow [►] is also used to select or confirm the desired item.

- "-----" indicates the end of the function menu.
- You can exit the programming mode any time by pressing [EXIT].
- If you do not press any valid buttons for 60 seconds, the unit will exit the programming mode.

Time and Date

You can select 24-hour clock or AM/PM by programming.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

Preparation

1 Press [FUNCTION/EDIT].

2 Scroll to "Set clock ?" by pressing [▼] or [▲].

Set clock ?
▲▼ [OK]=Yes
☒

3 Press [OK] (Yes key).

00:00 31.12
2006
▼ [OK]=Next
☒

4 Press [OK] (Next key).
Enter the current year.
(Example: To set 2006, enter "06".)
• You can set the year 2000 to 2099.

Enter year
2006
▲▼ [OK]=Next
☒

5 Press [OK] (Next key).

Enter time
00:00
▲▼ [OK]=Next
☒

6 Enter the current time (hour and minute) using a 4-digit number.
(Example: To set 9:30, enter "0930".)

Enter time
09:30
▲▼ [OK]=Next
☒

- For 24-hour clock: Enter numbers between 0000 and 2359.
- For AM/PM setting: Enter numbers between 0100 and 1259.

7 Press [OK] (Next key).

- If numbers between 0000 and 0059, or 1300 and 2359 are entered, the time will automatically be set using the 24-hour clock. Skip steps 8 and 9, and go to step 10.

#=AM/PM/24H
24H
▲▼ [OK]=Next
☒


(Continued ➔)

→ Settings

- 8 Press **[#]** to select “AM”, “PM” or 24-hour clock.
(Example: You select “PM”.)

```
#=AM/ PM/ 24H
PM
▲▼      [OK]=Next
⌂
```

Display Option

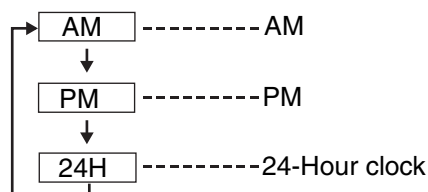

- Each time you press **[#]**, the selection will change on the display.

- 9 Press **[OK]** (Next key).

```
Enter day.month
31.12
▲      [OK]=Save
⌂
```

- 10 Enter the current day and month using a 4-digit number.
(Example: To set Dec. 27, enter “2712”.)

```
Enter day.month
27.12
▲      [OK]=Save
⌂
```

- 11 Press **[OK]** (Save key).

- A long beep sounds.
- The clock starts working.
- The display will return to step 2. To exit the programming mode, press **[EXIT]** or wait for 60 seconds.
- You can go back to the previous screen by pressing **[▲]**, when setting the time and date (steps 4 through 10).
- If 3 beeps sound when entering the time and date, the time and date entered are not correct. Enter the correct time and date.

If the batteries installed in the unit expired, the time and date will be shown as “0:00 31.12” or “12:00AM 31.12”, and “⊖” will flash. Replace the batteries then adjust the time and date.

For Caller ID service users (p. 18)

If a time display service is available with the Caller ID service:

- The Caller ID information will re-set the clock after the ring if the adjusted time and/or date is incorrect and when the Time Adjustment is set to ON (p. 14). If the time and date has not previously been set, the Caller ID information will not adjust the clock.

Display Language

You can select “English”, “Czech”, “Polish”, “Hungarian” or “Romanian” as the display language.

Your phone default setting is “English”.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press [FUNCTION/EDIT].
- 2 Scroll to “Change language?” by pressing [▼] or [▲].
- 3 Press [OK] (Yes key).
- 4 Select “English”, “Cestina”, “Polski”, “Magyar” or “Româna” by pressing [▼] or [▲].
- 5 Press [OK] (Save key).
 - A long beep sounds.
 - The display will return to step 2. To exit the programming mode, press [EXIT] or wait for 60 seconds.

Change language?
▲▼ [OK]=Yes

Language
:English
▲▼ [OK]=Save

- You can exit the programming mode any time by pressing [EXIT].

➔ Settings

Dialling Mode

You can select the dialling mode by programming. If you have touch tone service, set to Tone. If rotary or pulse service is used, set to Pulse. Your phone default setting is Tone.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press [FUNCTION/EDIT].
- 2 Scroll to "Program ?" by pressing [▼] or [▲]. Press [OK] (Yes key).
- 3 Scroll to "Set dial mode ?" by pressing [▼] or [▲].
- 4 Press [OK] (Yes key).
- 5 Select "Pulse" or "Tone" by pressing [▼] or [▲].
- 6 Press [OK] (Save key).
 - A long beep sounds.
 - The display will return to step 3. To exit the programming mode, press [EXIT] or wait for 60 seconds.

Set dial mode ?
▲▼ [OK]=Yes

Dial mode
:Tone
▲▼ [OK]=Save

- You can exit the programming mode any time by pressing [EXIT].

LCD Contrast

You can select the LCD contrast level from 1 to 4 by programming. Your phone default setting is 2.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press [FUNCTION/EDIT].
- 2 Scroll to "Program ?" by pressing [▼] or [▲]. Press [OK] (Yes key).
- 3 Scroll to "LCD contrast ?" by pressing [▼] or [▲].
 - The current setting is displayed.

LCD contrast ?
▲▼ [OK]=Yes

- 4 Press [OK] (Yes key).
- 5 Select the desired contrast by pressing [▼] or [▲].
 - Each time you press [▼] or [▲], the LCD contrast will change.

LCD contrast
Low■■■■■High
▲▼ [OK]=Save

- 6 Press [OK] (Save key).
 - A long beep sounds.
 - The display will return to step 3. To exit the programming mode, press [EXIT] or wait for 60 seconds.
- You can exit the programming mode any time by pressing [EXIT].


Ringer Volume

You can select the ringer volume to HIGH, LOW or OFF. Your phone default setting is HIGH.



RINGER Selector:
Set to HIGH, LOW or OFF.

- When set to OFF, the unit will not ring.

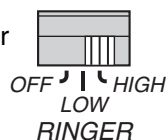

→ Settings

Time Adjustment (Caller ID subscribers only)

Using this feature, the unit's date and time setting will be automatically adjusted when caller information is received.

You can set the auto time adjustment by programming.

Your phone default setting is OFF.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press [FUNCTION/EDIT].
- 2 Scroll to "Program ?" by pressing [▼] or [▲]. Press [OK] (Yes key).
- 3 Scroll to "Time adjustment?" by pressing [▼] or [▲].
- 4 Press [OK] (Yes key).
- 5 Select "On" or "Off" by pressing [▼] or [▲].
(Example: "On" is selected.)
- 6 Press [OK] (Save key).
 - A long beep sounds.
 - The display will return to step 3. To exit the programming mode, press [EXIT] or wait for 60 seconds.
 - To use this feature, set the date and time in advance (p. 9).

Time adjustment?
▲▼ [OK]=Yes

Time adjustment
:On
▲▼ [OK]=Save

Making Calls

You can make a call by simply lifting the handset. To hang up, place the handset on the cradle.

Using the speakerphone

- 1 Press **[SP-PHONE/HEADSET]**, then dial a phone number.

OR

Dial a phone number, then press **[SP-PHONE/HEADSET]**.

- The indicator lights.
- The dialled number is displayed.
- After a few seconds, the display will show the length of the call.
- If you have misdialled, hang up and start again from step 1.

12:34	21.5
1234567890	

12:34	21.5
00-00-02	

- 2 When the other party answers, talk into the **MIC** (microphone).

- 3 To hang up, press **[SP-PHONE/HEADSET]**.
 - The indicator light goes out.

Basic Operation

During speakerphone operation

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If the other party has difficulty hearing you, press **VOLUME [▼]** to decrease the speaker volume.
- You can switch to the handset by lifting it up. To switch back to the speakerphone, press **[SP-PHONE/HEADSET]**.

➔ Making Calls

To redial the last number dialed

Using the handset:

Lift the handset ➔ press **[REDIAL]**.

OR

Press **[REDIAL]** ➔ Lift the handset.

Using the speakerphone:

Press **[SP-PHONE/HEADSET]** ➔ press **[REDIAL]**.

OR

Press **[REDIAL]** ➔ press **[SP-PHONE/HEADSET]**.

Automatic Redial:

When using the speakerphone, the unit redials the last dialed number up to 15 times within a 10-minute period if the line is busy. During Auto redial, "Waiting redial" will be displayed and the SP-PHONE/HEADSET indicator light flashes.

To redial using the redial list (Memory Redial)

The last 20 phone numbers dialed are stored in the redial list.

1. Press **[REDIAL]**.

- The last number dialed and "●●" are displayed.
- When the number dialed has been stored in the Phonebook, the name is also displayed.

2. Scroll to the desired number by pressing **[▼]** or **[▲]**.

- You can also scroll through the list by pressing **[REDIAL]**.
- To exit the list, press **[EXIT]**.

3. Lift the handset or press **[SP-PHONE/HEADSET]**.

- To erase an item, repeat steps 1 and 2, and press **[ERASE]**.
- If "No items stored" is displayed, the list is empty.

To adjust the handset volume (4 levels) or the speaker volume (8 levels) while talking

To increase, press **VOLUME [▲]**. To decrease, press **VOLUME [▼]**.

Example: Handset volume level: 2



"■ ■" shows one level.

Example: Speaker volume level: 3



"■ ■" shows one level.

- The display shows the volume level for a few seconds.

To put a call on hold

Press **[HOLD]**.

- The SP-PHONE/HEADSET indicator flashes.
- If using the handset, you can place it on the cradle.
- During the hold, both parties will hear a hold music. To cancel the hold music, see page 36.

To release the hold

If the handset is on the cradle, lift the handset.

If the handset is off the cradle, press **[HOLD]**.

If using the speakerphone, press **[SP-PHONE/HEADSET]**.

- If another phone is connected on the same line, you can also release the hold by lifting its handset.

Answering Calls

When a call is received, the unit rings, the RINGER indicator flashes quickly and “Incoming call” is displayed. You can answer a call by simply lifting the handset.

If you subscribe to a Caller ID service, the calling party’s information will be displayed when the unit is ringing (p.18).

Using the speakerphone

1 Press **[SP-PHONE/HEADSET]**.

- The indicator lights.

2 Talk into the **MIC** (microphone).

3 To hang up, press **[SP-PHONE/HEADSET]**.

- The indicator light goes out.

- When the ringer volume is set to OFF (p.13), the unit will not ring.
- The RINGER indicator will flash when
 - a telephone number is dialled in PULSE mode, or
 - someone picks up or hangs up another phone connected to the same phone line.

This is normal.

Caller ID Service

This unit is compatible with a Caller ID service offered by your telephone company. If you subscribe to a Caller ID service, the caller's information will be displayed when the unit is ringing.

The unit can record information of up to 50 incoming calls, including the time and date received, in the Caller List. The Caller List information is sorted from the most recent to the oldest call. When the 51st call is received, the oldest call information is deleted.


Using the list, you can automatically call back a caller. You can store the callers' numbers from the Caller List in the Phonebook memory or the Direct Dial memory.

How caller information is displayed when a call is received

The display shows the caller's phone number when the unit is ringing.*

- After you answer the call, the display will show the length of the call.

1114447777

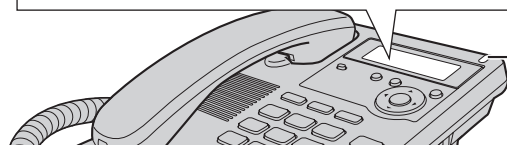

The RINGER indicator will flash quickly when a call is being received.

*Private name display

If you receive a call from one of the same phone numbers stored in the Phonebook or Direct Dial memory, the caller's name will be displayed.

TINA ROBINSON
1114447777

- To use this function, names and phone numbers must be stored in the Phonebook (p. 26) or Direct Dial memory (p. 32).
- Caller information will not be displayed in the following cases:
 - If the caller dialed from an area which does not provide a Caller ID service, the display will show "Out of area".
 - If the caller has requested not to display his/her information, the display will show "Private caller".
 - If a long distance call is identified and the caller's name and/or number cannot be received, the display will show "Long distance".
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.

- If the batteries installed in the unit have expired, Caller ID services will not be available.
- If the name and the time/date display service is available in your area, the display will show caller's names and the time/date the calls were received. For further information, please contact your telephone company.

Using the Caller List

If you have received 10 missed calls, the number of missed calls will be displayed as shown, while the unit is not in use.

12:34 21.5
10 missed calls

Viewing the Caller List

To check who has called, follow the steps below.

- 1 Press [▼] or [▲] to enter the Caller List.


Caller list
10 missed calls
▲▼

- 2 To search from the most recent call, press [▼].
 - To search from the oldest call, press [▲].
 - To scroll through callers, press [▼] or [▲].

- 3 To exit the Caller List, press [EXIT].

• If "No items stored" is displayed in step 1, the Caller List is empty.

Example: When you search from the most recent call:

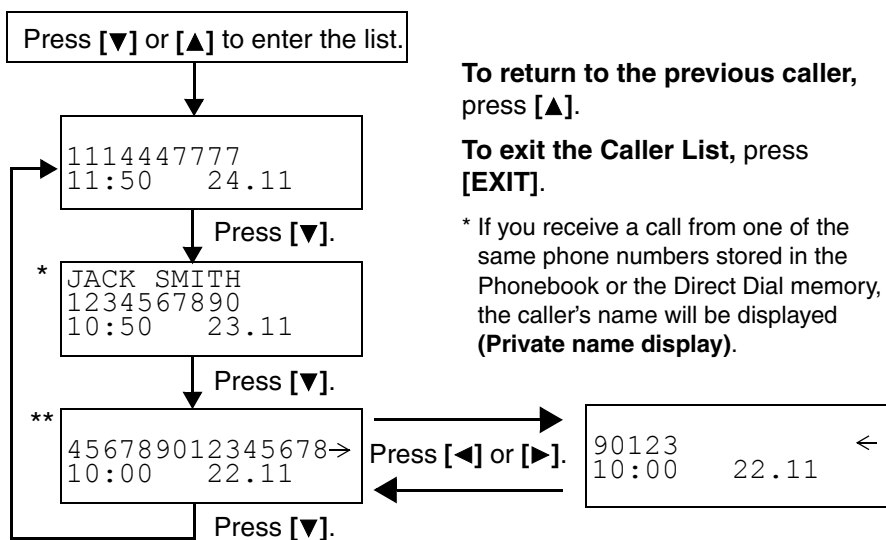

** If an arrow (→) or (←) is displayed after the number, the whole phone number has not been shown. Press [◀] or [▶] to see the remaining numbers or to return to the previous display. Each time you press [◀] or [▶], the display will change alternately.

→ Using the Caller List

Display meaning:

- ✓: You have checked this caller information, answered the call or called back the caller.

Calling Back from the Caller List

1 Press [▼] or [▲] to enter the Caller List.

2 Scroll to the desired caller by pressing [▼] or [▲].

- To exit the Caller List, press [EXIT] or wait for 60 seconds.

1234567890
10:50 23.11

3 Lift the handset or press [SP-PHONE/HEADSET].

- The displayed phone number is dialled automatically.
- After a few seconds, the display will show the length of the call.

12:34 25.11
1234567890

12:34 25.11
00-00-02

- In some cases, you may have to edit the number before dialling (p. 21).
- If a phone number is not displayed in the caller information, you cannot call back that caller using this feature.

Editing the Caller's Phone Number

You can edit a phone number recorded in the Caller List.

- 1 Press [▼] or [▲] to enter the Caller List.
- 2 Scroll to the desired caller by pressing [▼] or [▲].

1	2	3	4	5	6	7	8	9	0
10:50								23.11	

- 3 Press [FUNCTION/EDIT].

To add a number

Add a number to the current number by pressing dial buttons.

0	1	2	3	4	5	6	7	8	9	0
▲▼										[OK]=Next

To erase the number

Press [ERASE] to erase the number.

- To move the cursor, press [◀] or [▶].
- You may also delete a number by pressing [#].

- 4 After editing, you can continue with calling back or storing procedures.
To call back, lift the handset or press [SP-PHONE/HEADSET] (p. 20).
To store the number in the Phonebook memory, follow steps 4 to 5 on pages 22 to complete the operation.
To store the number in the Direct Dial memory, follow steps 4 to 6 on pages 23 and 24 to complete the operation.

- To exit the Caller List during editing, press [EXIT] or wait for 60 seconds.
- The number edited in step 3 will not be maintained in the Caller List.

→ Using the Caller List

Storing Caller List Information in the Phonebook

You can store numbers that are in the Caller List in the Phonebook.
Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press [▼] or [▲] to enter the Caller List.
 - 2 Scroll to the caller you want to store in the Phonebook by pressing [▼] or [▲].

1234567890
 10:50 23.11
 - 3 Press [FUNCTION/EDIT].
 - If the number requires editing, see page 21.

1234567890
 ▲▼ [OK]=Next
 - 4 Press [OK] (Next key).
 - a) If a name is not required, press [OK] (Next key).
 - b) If a name is required, enter the name (p. 27). When finished, press [OK] (Next key).

Enter name
 ▲ [OK]=Next

Enter name
 JACK SMITH
 ▲ [OK]=Next

>Save phonebook
 Save M1,M2,M3
 ▼ [OK]=Save
 - 5 Press [OK] (Save key).
 - A long beep sounds.
 - After a few seconds, the display will return to the Caller List. You can continue storing other items. To exit the Caller List, press [EXIT] or wait for 60 seconds.

JACK SMITH
 1234567890
- If 3 beeps sound and the display shows "Phonebook full" in step 5, press [EXIT] to exit the list. To erase other stored items from the Phonebook, see page 31.
 - To cancel during programming, press [EXIT]. Start again from step 1.
 - You cannot store caller information in the Phonebook if a phone number is not displayed.

Storing Caller List Information in the Direct Dial Memory

You can store numbers that are in the Caller List to the Direct Dial memory ([M1], [M2] and [M3]).

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

1 Press [▼] or [▲] to enter the Caller List.

2 Scroll to the caller you want to store in the Direct Dial memory by pressing [▼] or [▲].

```
1234567890
10:50      23.11
```

3 Press [FUNCTION/EDIT].

- If the number requires editing, see page 21.

```
1234567890
▲▼      [OK]=Next
```

4 Press [OK] (Next key).

- If a name is not required, press [OK] (Next key).
- If a name is required, enter the name (p. 27). When finished, press [OK] (Next key).

```
Enter name
▲      [OK]=Next
```

```
Enter name
JACK SMITH
▲      [OK]=Next
```

5 Press [▼].

```
Save phonebook
>Save M1,M2,M3
▲ M1,M2,M3=Save
```

6 Press one of the Direct Dial button [M1], [M2] or [M3] (Example: [M1] is pressed).

```
JACK SMITH
1234567890
```

Basic Operation

(Continued ➡)

➔ Using the Caller List

If the Direct Dial button selected is occupied, the display on the right will be shown.

To overwrite, press **[OK]** (Yes key).

To select another empty Direct Dial memory, press **[▲]** (No key), press an empty Direct Dial button by pressing **[M1]**, **[M2]** or **[M3]** (Save key).

- A long beep sounds.
- After a few seconds, the display will return to the Caller List. You can continue storing other items. To exit the Caller List, press **[EXIT]** or wait for 60 seconds.

M1 is occupied
Overwrite ?
[▲]=No [OK]=Yes

- To erase other stored items from the Direct Dial memory, see page 33.
- To cancel during programming, press **[EXIT]**. Start again from step 1.
- You cannot store Caller List information in the Direct Dial memory if a phone number is not displayed.

Erasing Caller List Information

After checking the Caller List, you can erase some or all of the entries.
**Make sure that the handset is on the cradle, and the SP-PHONE/
 HEADSET indicator light is off.**

To erase a specific caller from the Caller List

1 Press [▼] or [▲] to enter the Caller List.

2 Scroll to the caller you want to erase from the Caller List by pressing [▼] or [▲].

1234567890
 10:50 23.11 ✓

3 Press [ERASE].

- A long beep sounds and the information is erased.
- After a few seconds, the display will show the previous caller information.
- To exit the Caller List, press [EXIT] or wait for 60 seconds.

Erased

Basic Operation

To erase all entries in the Caller List

1 Press [▼] or [▲] to enter the Caller List.

Caller list
 10 missed calls
 ▲▼

2 Press [ERASE].

All erase ?
 [▲]=No [OK]=Yes

3 Press [OK] (Yes key).

- A long beep sounds and all entries are erased.
- The unit will exit the Caller List.

All erased

Phonebook

Storing Names and Phone Numbers in Phonebook

You can store up to 50 names and phone numbers in memory.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press **[FUNCTION/EDIT]**.

Save phonebook ?
 ▲▼ [OK]=Yes
 Ⓚ

- 2 Press **[OK]** (Yes key).

Phonebook
 10 items
 Ⓚ

- 3 Enter a name, up to 15 characters using the dialling buttons **[0]** to **[9]**, **[*]** and **#** (p. 26).

Enter name
 Tom Jones
 ▼ [OK]=Next
 Ⓚ

- To move the cursor, press **[◀]** or **[▶]**.
- If a name is not required, go to step 4.

- 4 Press **[OK]** (Next key).

Enter phone No.
 ▲
 Ⓚ

- 5 Enter a phone number up to 32 digits.

- If you have entered a wrong number, press **[ERASE]** and enter the correct number.
- If you want to change the storing name, press **[▲]** to reach the desired display.

0987654321
 ▲ [OK]=Save
 Ⓚ

- 6 Press **[OK]** (Save key).

- The entered name and phone number are displayed.

Tom Jones
 0987654321
 Ⓚ

- If the display shows "Phonebook full" in step 2, press **[EXIT]** to exit the list. To erase other stored items from the Phonebook, see page 31.
- You can exit the programming mode any time by pressing **[EXIT]**.
- If a pause is required for dialling, press **[PAUSE]** where needed. If required, you can also store **[FLASH]** in a phone number. Pressing **[PAUSE]** or **[FLASH]** counts as one digit (p. 35, 37).

To store an emergency number (#):

Emergency numbers are numbers stored in the Phonebook that can be dialled even when the Dial Lock (p. 39) or Call Restriction (p. 40) is set to ON.

To store a number as an emergency number, add # at the beginning of the name in step 3.



Selecting characters to enter names

The dialling buttons ([0] to [9], [*] and [#]) can be used to enter letters and symbols. Pressing each button selects a character as shown below.

Keys	Number of times key is pressed								
	1	2	3	4	5	6	7	8	9
[1]	&	'	()	,	-	.	/	1
[2]	a	b	c	A	B	C	2		
[3]	d	e	f	D	E	F	3		
[4]	g	h	i	G	H	I	4		
[5]	j	k	l	J	K	L	5		
[6]	m	n	o	M	N	O	6		
[7]	p	q	r	s	P	Q	R	S	7
[8]	t	u	v	T	U	V	8		
[9]	w	x	y	z	W	X	Y	Z	9
[*]	*								
[0]	0	Space							
[#]	#								
[◀]	To move the cursor to the left								
[▶]	To move the cursor to the right								

If you make a mistake while entering a name

Use [◀] or [▶] to move the cursor to the incorrect character, press [ERASE] to delete and enter the correct character. Each time you press [ERASE], a character is erased.

For example, to enter "Tom Jones":

- 1 Press [8] four times.
- 2 Press [6] three times, then press [▶].
- 3 Press [6] once, then press [▶] twice.
- 4 Press [5] four times, press [6] three times, then press [▶].
- 5 Press [6] twice, press [3] twice, then press [7] four times.

To

Tom

Tom Jo

 
Tom Jones

→ Phonebook

Dialling from the Phonebook

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press [◀] or [▶] to enter the Phonebook.




- 2 Scroll to the desired item by using [▼] or [▲].

- All Phonebook items are stored in order shown on the right.
- Item with # at the beginning will be displayed with first priority if Dial Lock or Call Restriction is set to ON.

To search for a name by initial:

1. Press the dialling button for the first letter of the desired name until any name with the same initial is displayed (see the Index table on page 29)
Example: To find "Frank", press [3] repeatedly until the first item under "F" is displayed.
2. Press [▼] repeatedly until the name is displayed.

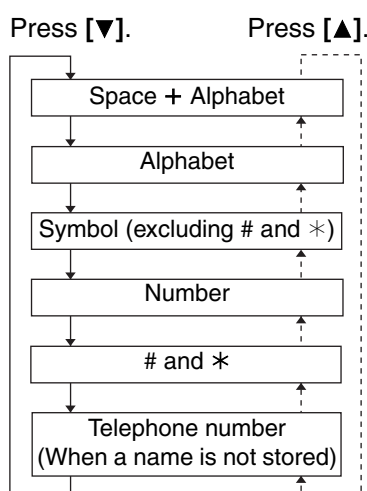

- 3 Lift the handset or press [SP-PHONE/HEADSET].

- 4 To hang up, place the handset on the cradle or press [SP-PHONE/HEADSET].

- If "No items stored" is displayed in step 1, the Phonebook is empty.
- You can exit the Phonebook any time by pressing [EXIT].
- You can also dial the stored number as follows:
 1. Lift the handset or press [SP-PHONE/HEADSET].
 2. Find the desired item (above steps 1 and 2).
 3. Press [OK] (Send key).

Index table

Keys	Index	Keys	Index
[1]	Symbols, 1, No name	[7]	P, Q, R, S, 7
[2]	A, B, C, 2	[8]	T, U, V, 8
[3]	D, E, F, 3	[9]	W, X, Y, Z, 9
[4]	G, H, I, 4	[*]	*
[5]	J, K, L, 5	[0]	Space, 0
[6]	M, N, O, 6	[#]	#

Chain Dial

You can dial a combination of Phonebook or manual key pad entries while making a call. This feature can be used, for example, to first automatically dial a calling card access number that you have stored in the Phonebook, then manually or automatically dial your PIN and then automatically dial the destination number from the Phonebook.

Example: Using a long distance calling card.

- To prevent misdialling, we recommend you add pauses where needed when storing numbers. For example, add pauses after a calling card access number and your PIN when storing in the Phonebook (p. 35).
1. Search and dial from Phonebook: 1800123456 (Calling card access number)
 - The Voice guidance may be announced.
 2. Search and dial from Phonebook: 1234 (Calling card PIN)
 3. Search and dial from Phonebook: 15550123456 (Destination number)

1 While you are on a call;
Press [◀] or [▶].

2 Search for the desired item by pressing [▼] or [▲].
• To search for an item by initial, see page 28.

3 Press [OK].
• The phone number is dialled.
• If required, repeat steps 1 to 3 for any remaining number.
• When storing a calling card access number and your PIN in the Phonebook as one item, press [PAUSE] to add pauses after the number and PIN as necessary (p. 35).
• If you have rotary or pulse service, you need to press [*] before pressing [◀] or [▶] in step 1 to change the dialling mode temporarily to tone.

→ Phonebook

Editing

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

1 Press [**◀**] or [**▶**] to enter the Phonebook.

2 Scroll to the Phonebook item you want to change by using [**▼**] or [**▲**].

- To search for the item by initial, see page 28.

Jane
1234567
📖

3 Press [**FUNCTION/EDIT**].

- If you do not want to change the name, go to step 5.

Enter name
Jane
▼ [OK] = Next
📖

4 Edit the name using the dialling buttons (p. 26).

- To clear an incorrect character, move the cursor to the character by using [**◀**] or [**▶**], then press [**ERASE**].

5 Press [**OK**] (Next key).

1234567
▲ [OK] = Save
📖

6 Insert the required numbers.

- If you have entered a wrong number, press [**ERASE**] and enter the correct number.

8901234567
▲ [OK] = Save
📖

7 Press [**OK**] (Save key).

- A long beep sounds.
- To exit the Phonebook, press [**EXIT**] or wait for 60 seconds.


Jane
8901234567
📖

Erasing


Make sure that the handset is on the cradle and the SP-PHONE/HEAD-SET indicator light is off.

- 1 Press [**◀**] or [**▶**] to enter the Phonebook.
- 2 Scroll the Phonebook item you want to erase by using [**▼**] or [**▲**].
 - To search for the item by initial, see page 28.

- 3 Press [**ERASE**].
 - To stop erasing, press [**▲**] (No key).

Erase ?
 [**▲**] = No [**OK**] = Yes


- 4 Press [**OK**] (Yes key).
 - A long beep sounds.
 - To erase other items, repeat from step 2.
 - To exit the Phonebook, press [**EXIT**] or wait for 60 seconds.

Erased


- Item with # at the beginning cannot be deleted when the Dial Lock or Call Restriction is set to ON.
- You can exit the programming mode any time by pressing [**EXIT**].

Advanced Operation

Direct Dial (M1, M2, M3)

Storing Names and Phone Numbers in Memory

You can store up to 3 names and phone numbers in the Direct Dial memory.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press **[FUNCTION/EDIT]**.
- 2 Scroll to the "Save M1, M2, M3 ?" by pressing **[▼]** or **[▲]**.
- 3 Press **[OK]** (Yes key).
- 4 Enter a name, up to 15 characters using the dialling buttons **[0]** to **[9]**, **[*]** and **#]** (p. 26).
 - To move the cursor, press **[◀]** or **[▶]**.
 - If a name is not required, go to step 5.
- 5 Press **[OK]** (Next key).
- 6 Enter a phone number up to 32 digits.
 - If you enter a wrong number, press **[ERASE]** and enter the correct number.
- 7 Press one of the Direct Dial button **[M1]**, **[M2]** or **[M3]** (Save key). (Example: **[M1]** is pressed.)
 - The entered name and phone number are displayed.
 - After a few seconds, the display will return to step 2. To exit the programming mode, press **[EXIT]** or wait for 60 seconds.

Save M1, M2, M3 ?
▲▼ [OK] = Yes

Enter name
John White
▼ [OK] = Next

Enter phone No.
▲

1234567890
▲ M1, M2, M3 = Save

John White
1234567890

If the Direct Dial button selected is occupied, the display on the right will be shown.

To overwrite, press **[OK]** (Yes key).
To select another empty Direct Dial memory, press **[▲]** (No key), then press an empty Direct Dial button (**[M1]**, **[M2]** or **[M3]**).

M1 is occupied
Overwrite ?
[▲]=No [OK]=Yes

- A long beep sounds.
- To continue storing other items, repeat from step 2.
- To exit the programming mode, press **[EXIT]** or wait for 60 seconds.
- To erase other stored items from the Direct Dial memory, see below.
- When using the Dial Lock (p. 39) or Call Restriction feature (p. 40), you cannot store a phone number in the Direct Dial memory (**[M1]**, **[M2]** or **[M3]**).
- You can exit the programming mode any time by pressing **[EXIT]**.
- If a pause is required for dialling, press **[PAUSE]** where needed. If required, you can also store **[FLASH]** in a phone number. Pressing **[PAUSE]** or **[FLASH]** counts as one digit (p. 35, 37).

To erase a stored number

1 Press the required Direct Dial button (**[M1]**, **[M2]** or **[M3]**).

2 Press **[ERASE]**.

- To cancel erasing, press **[▲]** (No key).

Erase ?
[▲]=No [OK]=Yes

3 Press **[OK]** (Yes key).

- A long beep sounds.

Erased

Memory Empty

Advanced Operation

- To exit the programming mode, press **[EXIT]** or wait for 60 seconds.

➔ Direct Dial (M1, M2, M3)


Dialling

- 1 Lift the handset or press **[SP-PHONE/HEADSET]**.
- 2 Press the required Direct Dial button (**[M1]**, **[M2]** or **[M3]**).
 - The stored number is displayed and dialled.

OR

- 1 Press the required Direct Dial button (**[M1]**, **[M2]** or **[M3]**).
 - The stored number is displayed.
- 2 Lift the handset or press **[SP-PHONE/HEADSET]**.

Special Features

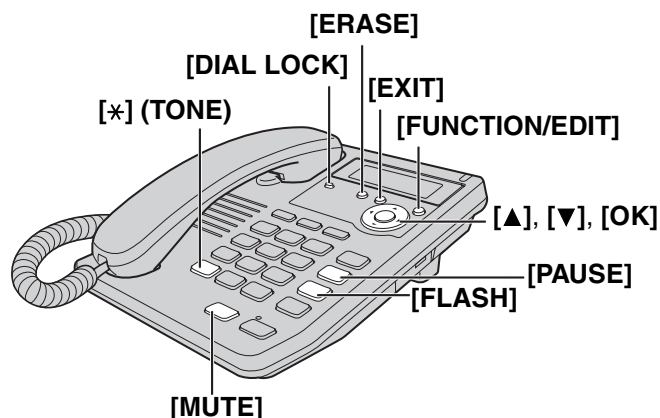

Temporary Tone Dialling

(For Rotary or Pulse Service Users)

Press **[*] (TONE)** before entering access numbers which require tone dialling.

- The dialling mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the mode will return to pulse.

How to Use the PAUSE Button

(For PBX Line/Long Distance Calls)

We recommend you press **[PAUSE]** if a pause is required for dialling with a PBX or to make a long distance call.

Example: Line access number **[9]** (PBX)

[9] → [PAUSE] → [Phone number]

- Pressing **[PAUSE]** once creates a 3.5 second pause. This prevents misdialling when you redial or dial a stored number.
- Pressing **[PAUSE]** more than once increases the length of the pause between numbers.

For Call Waiting Service Users

Press **[FLASH]** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **[FLASH]** again.
- If this function does not operate properly, consult your telephone company for details.

➔ Special Features

Muting Your Conversation

Press **[MUTE]** while talking. “” is displayed.

- The other party cannot hear you but you can hear them.
- To resume the conversation, press **[MUTE]** again.

Setting Hold Music to ON/OFF

You can set music play during the hold as follows. Your phone default setting is ON.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press **[FUNCTION/EDIT]**.
- 2 Scroll to “Program ?” by pressing **[▼]** or **[▲]**, and press **[OK]** (Yes key).
- 3 Scroll to “Set hold music ?” by pressing **[▼]** or **[▲]**.
- 4 Press **[OK]** (Yes key).
- 5 Select “Off” or “On” by pressing **[▼]** or **[▲]**.
- 6 Press **[OK]** (Save key).
 - A long beep sounds.
 - The display will return to step 3. To exit the programming mode, press **[EXIT]** or wait for 60 seconds.

Set hold music ?
▲▼ [OK]=Yes

Hold music
:On
▲▼ [OK]=Save

FLASH Button

Pressing **[FLASH]** allows you to use special features of your host PBX such as transferring an extension call or accessing special telephone services (optional) such as call waiting.

Selecting the flash time

The flash time depends on your telephone exchange or host PBX. You can select the following flash times: “80, 90, 100, 110, 160, 200, 250, 300, 400, 600, 700, 900 ms (milliseconds)”. Your phone default setting is “100 ms”.

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press **[FUNCTION/EDIT]**.
- 2 Scroll to “Program ?” by pressing **[▼]** or **[▲]**, and press **[OK]** (Yes key).
- 3 Scroll to “Set flash time ?” by pressing **[▼]** or **[▲]**.
- 4 Press **[OK]** (Yes key).
- 5 Select the desired time by pressing **[▼]** or **[▲]**.
- 6 Press **[OK]** (Save key).
 - A long beep sounds.
 - The display will return to step 3. To exit the programming mode, press **[EXIT]** or wait for 60 seconds.

Set flash time ?
▲▼ [OK]=Yes

Flash time
:100ms
▲▼ [OK]=Save

Advanced Operation

- You can exit the programming mode any time by pressing **[EXIT]**.
- If the unit is connected via a PBX, PBX functions (transferring a call, etc.) might not work correctly. Consult your PBX supplier for the correct setting.
- If there is no battery, flash function may not operate properly.

➔ Special Features

Setting the Password

You can change the password for the dial lock and call restriction. The factory preset password is "1111".

To set the password

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press **[FUNCTION/EDIT]**.
- 2 Scroll to "Program ?" by pressing **[▼]** or **[▲]**, and press **[OK]** (Yes key).
- 3 Scroll to "Change password?" by pressing **[▼]** or **[▲]**.
- 4 Press **[OK]** (Yes key).
- 5 Enter the current password.
- 6 Press **[OK]** (Next key).
 - If the wrong password is entered, 3 beeps will sound. Enter the correct password.
- 7 Enter a new password using a 4-digit number. (Example: "1234" is entered.)
- 8 Press **[OK]** (Save key).
 - A long beep sounds.
 - The display will return to step 3. To exit the programming mode, press **[EXIT]** or wait for 60 seconds.

Change password?
▲▼ [OK]=Yes

Current password
:---- [OK]=Next

Current password
:**** [OK]=Next

New password
:---- [OK]=Save

New password
:1234 [OK]=Save

- You can exit the programming mode any time by pressing **[EXIT]**.

Please write down your password. If you forget your password, consult your nearest Panasonic service center.

Dial Lock

The Dial Lock feature allows you to prevent others from making calls. To use this, set the feature ON. Your phone comes from factory is set to OFF.

Before using the Dial Lock or Call Restriction feature (p. 40), we recommend storing emergency numbers in the memory of Direct Dial buttons (p. 32) and Phonebook (p. 26) as emergency numbers (#). Even if the dialling buttons are locked, the numbers stored in these buttons can be dialled.

To set the dial lock

- 1 Press **[DIAL LOCK]**.
 - “**—O**” flashes on the display.

Enter password
:----- [OK]=Save
—O

- 2 Enter the password (p. 38).

Enter password
:**** [OK]=Save
—O

- 3 Press **[OK]** (Save key).
 - A long beep sounds, and “**—O**” displays.
 - If the wrong password is entered, 3 beeps will sound. Enter the correct password.

If the dial buttons are pressed before/after lifting the handset or pressing **[SP-PHONE/HEADSET]**, “**DIAL LOCKED**” will be displayed.

- You can use the following features while the dialling buttons are locked.
- Dialling a number you programmed into the memory of Direct Dial buttons (p. 32) and emergency numbers (#) (p. 26)
 - Selecting the ringer volume (p. 13)
 - Adjusting the handset, speakerphone and headset volumes (p. 16, 42)
 - Putting a call on hold (p. 17)
 - Muting the conversation (p. 36)
 - Answering the second call by pressing **[FLASH]** (p. 37)
 - Programming (except storing/editing the Direct Dial memory and emergency numbers (#)).
 - Finding an item in the following lists
 - Caller list (p. 19)
 - Phonebook (p. 28)
 - Redial list (p. 16)

To cancel the dial lock

Follow above steps 1 through 3. In step 3, “**—O**” will disappear.

➔ Special Features

Call Restriction

You can prevent the unit from dialling phone numbers beginning with specified digit(s) (1 digit or 2 digits). Phone numbers with the restricted leading digits cannot be dialled out, except the emergency numbers stored in the Phonebook and Direct Dial memory ([M1], [M2] and [M3]).

To set the call restriction

Make sure that the handset is on the cradle and the SP-PHONE/HEADSET indicator light is off.

- 1 Press [FUNCTION/EDIT].
- 2 Scroll to "Program ?" by pressing [▼] or [▲], and press [OK] (Yes key).

- 3 Scroll to "Call restrict ?" by pressing [▼] or [▲].

Call restrict ?
▲▼ [OK]=Yes

- 4 Press [OK] (Yes key).

Restrict No.
:-- [OK]=Save

If you changed the password "1111" (factory set), the display on the right will be shown. Follow below steps 1 and 2.

1. Enter the password (p. 38).
2. Press [OK] (Next key). Go to step 5.
 - If the wrong password is entered, 3 beeps will sound. Enter the correct password.

Enter password
:---- [OK]=Next

Enter password
:**** [OK]=Next

- 5 Enter the number(s) (1 digit or 2 digits) you want to restrict ([0] to [9]).

- If the wrong number is entered, press [ERASE] and enter the correct number.

Example: "9" is entered.

Restrict No.
:9- [OK]=Save

- 6 Press [OK] (Save key).
 - A long beep sounds.
 - The display will return to step 3. To exit the programming mode, press [EXIT] or wait for 60 seconds.

When dialling a phone number with the restricted leading digit(s), "CALL RESTRICTED" will be displayed but not dialled out.

To cancel the call restriction

Follow steps 1 through 4 on page 40. In step 5, press **[ERASE]** to clear the restricted digits, and press **[OK]** (Save key).


Advanced Operation

Optional Headset

Plugging the optional headset into the unit allows a hands-free phone conversation. Please use only a Panasonic KX-TCA89EX.

Connecting the Optional Headset to the Unit

Connect the optional headset to the headset jack as shown below.

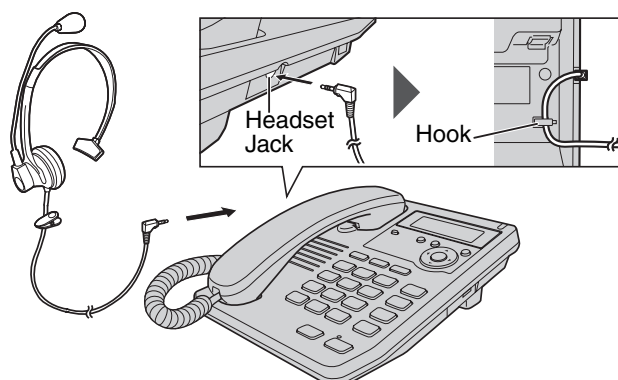

If you want to have a conversation without hands-free feature, disconnect the headset.

Making/Answering Calls

Make sure to install the batteries.

- 1** Press **[SP-PHONE/HEADSET]** to make or answer a call.

OR

Dial the number and press **[SP-PHONE/HEADSET]** to make a call.

- The **SP-PHONE/HEADSET** indicator lights.
- If you misdial during pre-dialling, press **[ERASE]** and enter the correct number. Then press **[SP-PHONE/HEADSET]** for dialling.

- 2** To hang up, press **[SP-PHONE/HEADSET]**.

- The indicator light goes out.

To adjust the headset receiver volume (4 levels):


While using the headset, press **VOLUME [▲]** or **[▼]**.

- During a conversation using the headset, you cannot switch the call to using the handset by simply lifting it off the cradle.
- If you disconnect the optional headset during a conversation with the handset on the cradle, the call will be switched to the speakerphone.
- During a conversation using the speakerphone, you can switch the call to the headset by connecting the headset.


Wall Mounting

This unit can be mounted on a wall.



- 1 Press the tabs in the direction of the arrows (①), then remove the wall mounting adaptor (②).

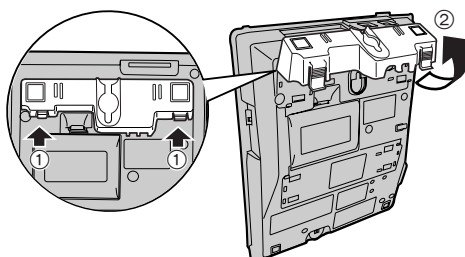


- 2 Tuck the telephone line cord inside the wall mounting adaptor, and push it in the direction of the arrow (①) and (②).
 - "UP WALL" should be facing upward.

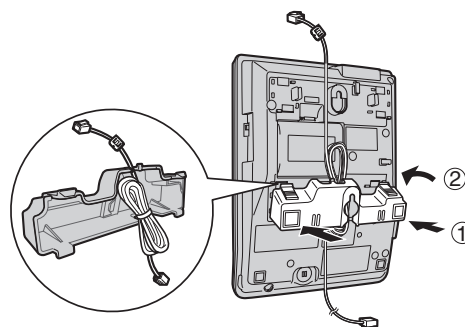

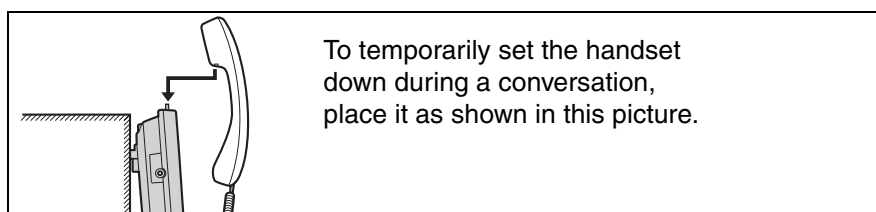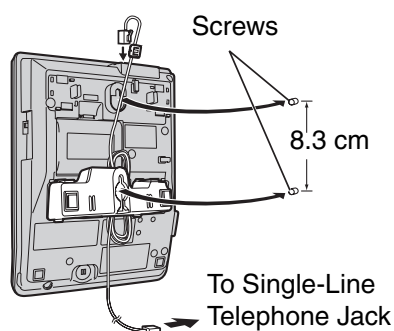

- 3 Drive screws (not included) into the wall using the wall template below. Connect the telephone line cord. Mount the unit, and slide it down.

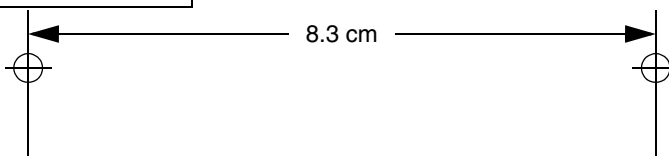


Wall Template




Battery Replacement

If “” flashes, the battery power is low. Install new batteries as soon as possible. If batteries are not replaced even after the “” is displayed, the unit may not work properly.

- Store the desired items in the Phonebook or Direct Dial memory, because after the battery replacement, the information stored in the Redial List will be cleared.

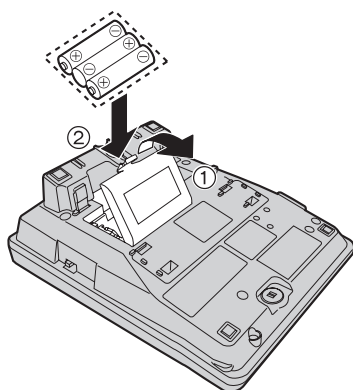

- 1 Disconnect the telephone line cord from the unit.
- 2 Press down in the direction of the arrow and open the cover (①).
- 3 Replace the batteries with new ones matching the correct polarity (+, -) (②), and close the cover.
- 4 Connect the telephone line cord to the unit.

 
- The time will be shown as “0:00 31.12” or “12:00AM 31.12” and “” will flash after replacing the batteries. Readjust the time and date.

Battery Precautions:


The batteries should be used correctly, otherwise the unit may be damaged by battery leakage.

- Do not mix different types of batteries.
- Do not charge, short-circuit, disassemble, heat or dispose the batteries in fire.
- Remove all the batteries when replacing.

Note:

- If you do not install the batteries or if the battery power is low, the time will be shown as “0:00 31.12” or “12:00AM 31.12” and “” will flash. Readjust the time after the battery replacement.
- Replace all the batteries every six months if using Alkaline batteries, or misoperation may occur. (When you use Manganese batteries, replace all of them every three months.)
- Do not use nickel-cadmium batteries.

Troubleshooting

Problem	Cause and Remedy
The unit does not work.	<ul style="list-style-type: none"> • Check the settings (p. 6 –14). • Remove the batteries and reinstall them to reset the unit.
The unit does not ring.	<ul style="list-style-type: none"> • The ringer selector is set to OFF. Set to HIGH, or LOW, see page 13.
The display is blank.	<ul style="list-style-type: none"> • Install new batteries page 44.
You cannot dial.	<ul style="list-style-type: none"> • Check that the dialling mode selection is correct page 12. • Dial lock mode is set. To cancel the mode, see page 39. • The dialled number is restricted. To cancel, see page 41.
The other party suddenly cannot hear your voice during a conversation.	<ul style="list-style-type: none"> • [MUTE] may have been pressed during the conversation. If “” is displayed, press [MUTE], see page 36.
You cannot program items such as the dialling mode.	<ul style="list-style-type: none"> • Programming is not possible when the handset is off the cradle, the SP-PHONE/HEADSET indicator lights, or when viewing the Caller List and the Phonebook. • Do not pause for over 60 seconds while programming.
The unit does not display the caller's phone number.	<ul style="list-style-type: none"> • You need to subscribe to a Caller ID service. • Install or replace the batteries. • Another telephone equipment may be interfering with your phone. Disconnect it and try again. • Telephone line noise may be interfering with the Caller ID information. Consult your telephone company.

→ Troubleshooting

Problem	Cause and Remedy
You cannot store a name and phone number in memory.	<ul style="list-style-type: none"> • Programming is not possible when the handset is off the cradle or the SP-PHONE/HEADSET indicator lights. • Check that the batteries are installed in the unit and that the battery power is not low. • Do not pause for over 60 seconds while storing. • Do not enter a phone number more than 32 digits long. • When using the Dial Lock (p. 39) or Call Restriction feature (p. 40), you cannot store a phone number in the Direct Dial memory ([M1], [M2] and [M3]) and emergency numbers (#). • If "Phonebook full" is displayed, erase other stored items from the Phonebook memory (p. 31).
While programming or searching, the unit starts to ring and stops the program/search.	<ul style="list-style-type: none"> • To answer the call, lift the handset or press [SP-PHONE/HEADSET]. Start again from the beginning after hanging up.
The display exits the Caller List.	<ul style="list-style-type: none"> • Do not pause for over 60 seconds while searching.
You cannot redial by pressing [REDIAL] .	<ul style="list-style-type: none"> • If the last number dialled was more than 32 digits long, the number will not be redialled correctly.
Information stored in the Redial List is erased.	<ul style="list-style-type: none"> • If "□" flashes, replace the batteries as soon as possible. Otherwise, information stored in the Redial List may be erased, and beep may not sound. Store the desired item in the Phonebook or Direct Dial memory, if necessary.

Safety Instructions

Take special care to follow the safety suggestions listed below.

Installations

Environment

- 1) Do not use this unit near water—for example, near a bathtub, washbowl, sink, etc. Damp basements should also be avoided.
- 2) The unit should be kept away from heat sources such as radiators, kitchen range, etc. It also should not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.

Placement

- 1) Do not place heavy objects on top of this unit.
- 2) Care should be taken so that objects do not fall onto, and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.
- 3) Place the unit on a flat surface.

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. It (they) may explode.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling the battery(ies) in order not to short the battery(ies) to conductive materials such as rings, bracelets, and keys. The battery(ies) and/or conductor may overheat and cause burns.
5. Do not recharge the battery(ies) provided with or identified for use with this product. The battery(ies) may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the battery(ies) provided with or identified for use with this product by heating. Sudden release of battery electrolyte may occur causing burns or irritation to the eyes or skin.
7. Replace all batteries at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries. (Applies to products employing more than one separately replaceable primary battery.)
8. When installing batteries observe the proper polarity or direction. Incorrect installation can cause charging, and may result in leakage or explosion. (Applies to products employing more than one separately replaceable primary battery.)
9. Remove the battery(ies) from this product if the product will not be used for a long period of time (several months or more). During this time the battery(ies) could leak in the product.
10. Discard the dead battery(ies) as soon as possible. The dead battery(ies) may leak in the product.
11. Do not store this product, or the battery(ies) provided with or identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.

Useful Information

→ Safety Instructions

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

If there is any trouble, disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, do not reconnect the unit to the telephone line until the trouble has been repaired. If the known working phone does not operate properly, consult your telephone company.

Specifications

Power Source:	From telephone line From 3 AA (LR6, R6, UM-3) batteries
Dimensions (H x W x D):	Approx. 91 mm x 165 mm x 220 mm
Mass (Weight):	Approx. 700 g
Dialling Mode:	Tone (DTMF)/Pulse
Operating Environment:	5 °C–40 °C

Specifications are subject to change without notice.



1999/5/EC

Manufactured for Panasonic Communications (Malaysia) Sdn. Bhd.
Senai Malaysia

Copyright:

This material is copyrighted by Panasonic Communications (Malaysia) Sdn. Bhd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications (Malaysia) Sdn. Bhd.

© 2006 Panasonic Communications (Malaysia) Sdn. Bhd. All Rights Reserved.

PQQX14999ZA FM0306EI0